

LAGUNA

Revo 24|36 Lathe 230v

Code: 111778

Distributed by

AXMINSTER TOOLS



UK
CE

DIGITAL MANUAL



N.B. Some pictures and diagrams in this manual may have buttons and electrical configurations which differ slightly from the machine you purchased

Contents

Safety Rules	3
Locking the lathe	6
Noise emission	7
Specification sheet	8
Receiving your machine	9
Introduction to your machine	11
Parts of the machine	12
What you will receive with the machine	16
Where to locate your machine	18
Unpacking your machine	18
Assembly and setup	20
Maintenance	32
Troubleshooting	35
Electrical drawing	37
Exploded view drawings	40
Conformity Certificates	57
Warranty	59

SAFETY RULES


1. **KEEP GUARDS IN PLACE** and in working order.
2. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
3. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
4. **DON'T USE IN DANGEROUS ENVIRONMENT.** Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
5. **KEEP CHILDREN AWAY.** All visitors should be kept safe distance from work area.
6. **MAKE WORKSHOP CHILD PROOF** with padlocks, master switches, or by removing starter keys.
7. **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was designed.
8. **USE RIGHT TOOL.** Don't force tool or attachment to do a job for which it was not designed.
9. **USE PROPER EXTENSION CORD.** Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table A (on the next page) shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.
10. **WEAR PROPER APPAREL.** Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.
11. **ALWAYS USE SAFETY GLASSES.** Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
12. **SECURE WORK.** Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.
13. **DON'T OVERREACH.** Keep proper footing and balance at all times.
14. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
15. **DISCONNECT TOOLS** before servicing; when changing accessories, such as blades, bits, cutters, and the like.
16. **REDUCE THE RISK OF UNINTENTIONAL STARTING.** Make sure switch is in off position before plugging in.
17. **USE RECOMMENDED ACCESSORIES.** Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury to persons.
18. **NEVER STAND ON TOOL.** Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
19. **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function - check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
20. **DIRECTION OF FEED.** Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
21. **NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF.** Don't leave tool until it comes to a complete stop.

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- **Lead** from lead based paint.
- **Crystalline silica** from bricks, cement, and other masonry products.
- **Arsenic and chromium** from chemically treated lumber.

Your risk of exposure varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as face or dust masks that are specifically designed to filter out microscopic particles.

Location of warning signs

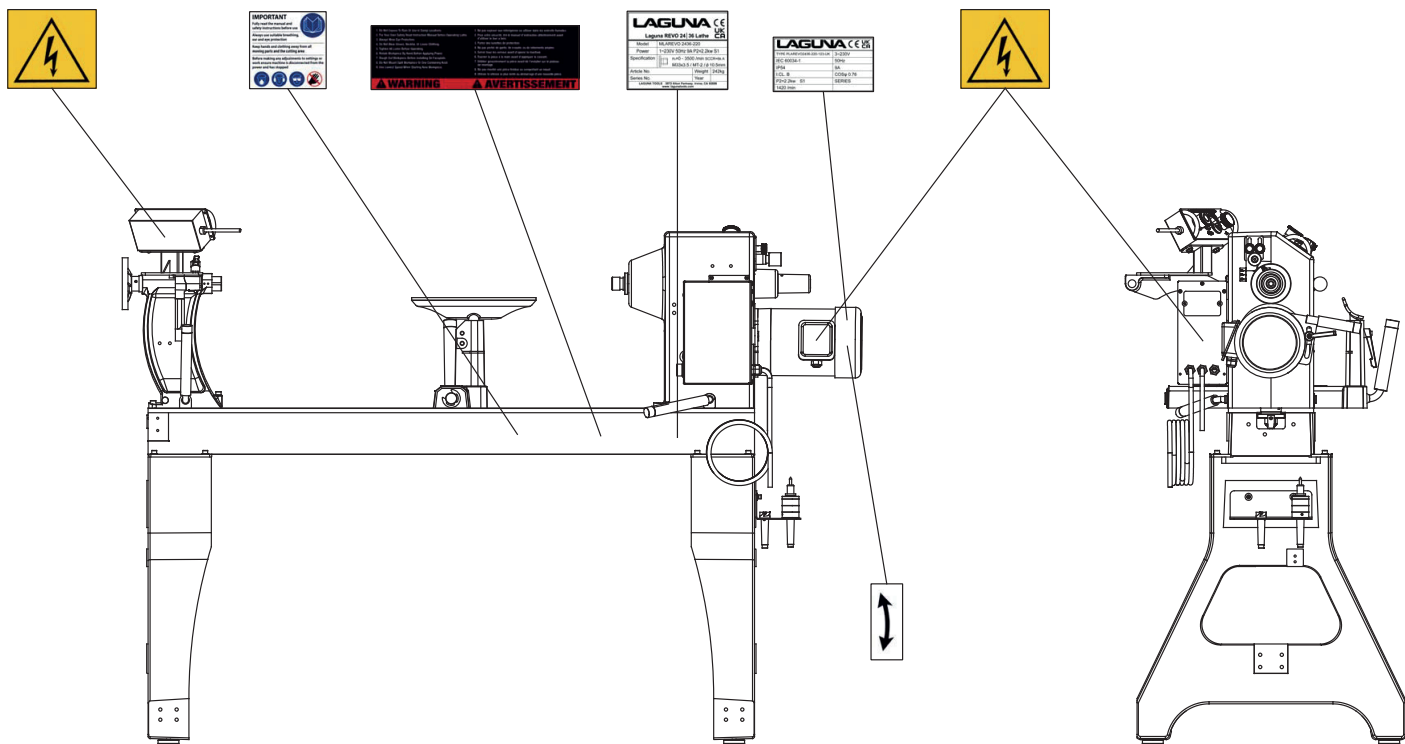

Wood lathe

Wood turning lathes are typically used to shape wood into cylindrical profiles. Objects made on a wood lathe include such items as furniture legs, lamp posts, baseball bats, bowls and other ornamental forms. Wood lathe tooling consists of fixturing and securing devices for the work piece, a moveable tool rest, and hand-held cutting tools in the form of long handled gouges, skews, scrapers, and parting tools. Specialty tooling is also available for internal shaping and surface development.

Electrical supply conditions

- Voltage: Steady state voltage: 0,9 to 1,1 of nominal voltage.
- Frequency: 0,99 to 1,01 of nominal frequency continuously; 0,98 to 1,02 short time.
- Harmonics: Harmonic distortion not exceeding 10 % of the total r.m.s. voltage between live conductors for the sum of the 2nd through to the 5th harmonic. An additional 2 % of the total r.m.s. voltage between live conductors for the sum of the 6th through to the 30th harmonic is permissible.
- Voltage unbalance: Neither the voltage of the negative sequence component nor the voltage of the zero sequence component in three-phase supplies exceeding 2 % of the positive sequence component.
- Voltage interruption: Supply interrupted or at zero voltage for not more than 3 ms at any random time in the supply cycle with more than 1 s between successive interruptions.
- Voltage dips: Voltage dips not exceeding 20 % of the peak voltage of the supply for more than one cycle with more than 1 s between successive dips.


Physical environment and operating conditions

- Ambient air temperature: Between air temperatures of +5 °C and +40 °C.
- Humidity: The relative humidity does not exceed 50 % at a maximum temperature of +40 °C.
- Altitude: Up to 1 000 m above mean sea level
- Transportation and storage: Within a range of -25 °C to +55 °C and for short periods not exceeding 24 h at up to +70 °C.


Locking the lathe

It is strongly recommended that the lathe is never left unattended in the unlocked condition. To lock the machine it is recommended that a cover (not supplied) is made to lock the control panel. We have supplied two concepts for locking the panel (see below). The cover can be made from wood or plastic, two covers (not supplied) are made to lock the control panels on both headstock and remote controller. We have supplied four concepts for locking the control panel (see below).


First, push down the emergency stop. Then lock the cover together by putting padlocks [not included] on the two handles on the control panel. To safeguard your machine from unauthorized operation and accidental starting by young children, the use of padlocks is strongly recommended.

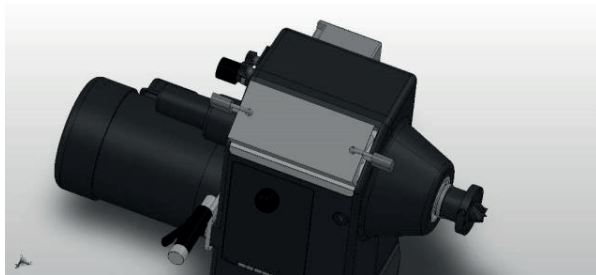


**Wooden safety cover
Padlocks**

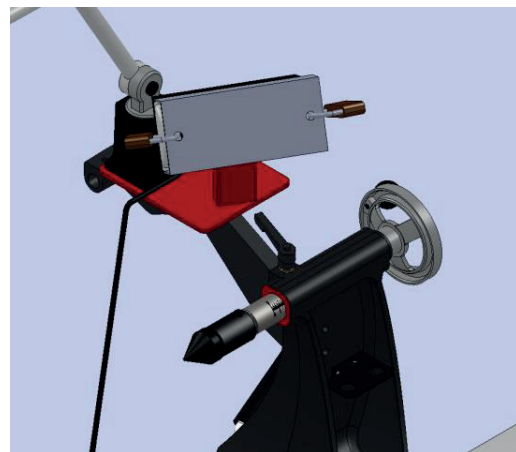

**Wooden safety cover
Padlocks**

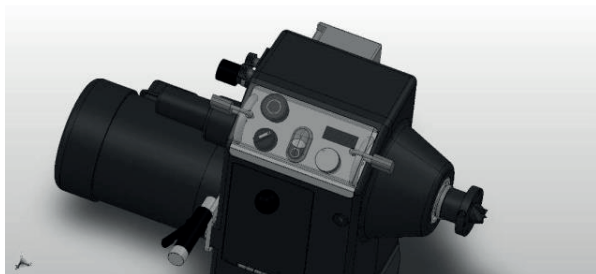

**Plastic safety cover
Padlocks**

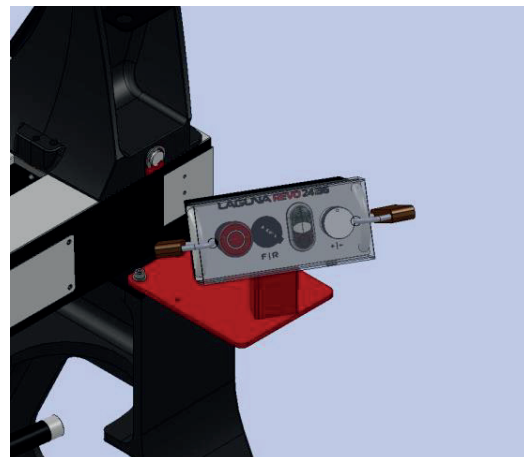

**Plastic safety cover
Padlocks**


Noise Emission.

Equivalent A-weighted Sound pressure level according to EN ISO 3746: 75.66 dB(A)
Uncertainty, K in decibels: 4.0 dB (A) according to EN ISO 4871

The figure quoted is emission levels and are not necessarily safe working levels.

Whilst there is a correlation between the emission and exposure levels, this cannot be used reliably to determine whether or not further precautions are required.

Factors that influence the actual level of exposure of the workforce include characteristics of the work room, the other sources of noise, etc. i.e. the number of machines and other adjacent processes. Also the permissible exposure level can vary from country to country, This information, however, will enable the user of the machine to make a better evaluation of the hazard and risk.

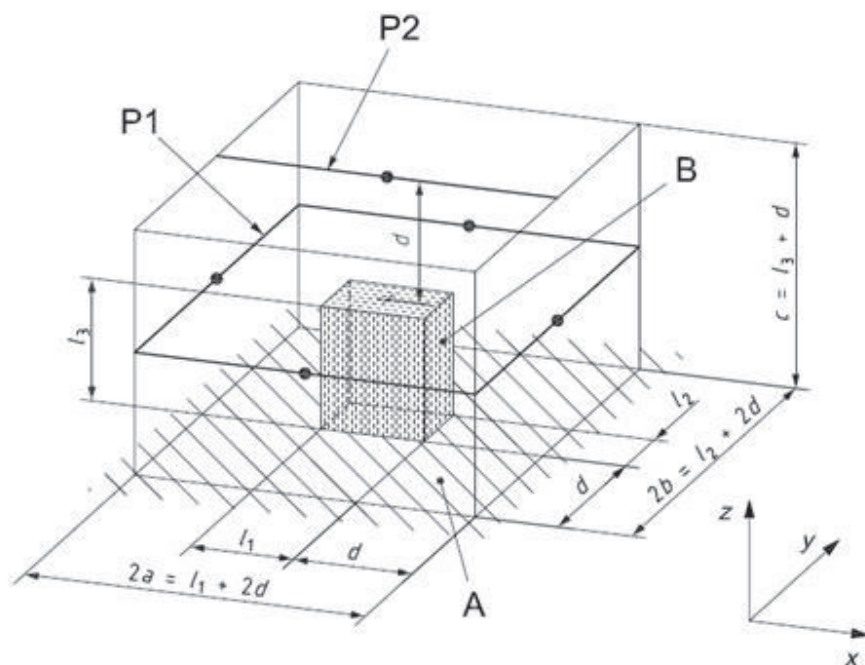

Specification sheet.

Motor	Induction,1420RPM, 3 HP 230V 3Ph
Voltage	230v 50hz 1Ph input
Recommended breaker size	15 amp
Swing over bed	24" (609mm)
Swing over banjo	19.75" (501mm)
Outboard swing max	38" (965mm)
Distance between centers	36" (914mm)
Floor to spindle center	44.5"(1130mm)
Floor to bed height	32.5" with pads (826mm)
Floor space	W60" D26" H52.25"(1524mm, 660mm, 1327mm)
Tool rest	12" (305mm)
Speed range high	135 - 3500 RPM
Speed range low	50 - 1300 RPM
VFD	Delta variable frequency drive
Drive belt	Poly-groove drive belt with easy access
Spindle	M33 x 3.5 right hand thread (M30 x 3.5 for Australia)
Spindle taper	MT 2
Spindle lock	Spring loaded
Spindle index	14 / 36 / 48 positions with lock
Headstock & tailstock bore	0.375" dia (9.5mm dia)
Tail stock travel	4.5" (114mm)
Tail stock removal	Self- ejecting
Tailstock tapers	MT 2
Face plate	3" diameter (76mm)
Bed material	Steel
Weight (Net / ship)	532/560 lbs (242kg / 255 kg)

Receiving your machine.

Note. It is probable that your machine will be delivered by a third party. Before you unpack your new machine you will need to first inspect the packing, invoice and shipping documents supplied by the driver.

Insure that there is no visible damage to the packing or the machine. You need to do this prior to the driver leaving. All damage must be noted on the delivery documents and signed by you and the delivery driver. You must then contact the seller (Laguna Tools) as soon as practical. If damage is found after delivery, contact the seller as soon as is practical.

Note. It is probable that you will find sawdust within your machine. This is because the machine has been tested prior to shipment from the factory and or Laguna Tools.


Laguna Tools endeavours to test machines prior to shipping to customers. As movement can take place during transportation it must be noted that additional machine movement can take place between Laguna Tools and the end user and some adjustments may have to be undertaken by the customer. These adjustments are covered in the various sections of this manual.

Introduction to lathes.

This machine is designed to give you years of safe service. Read this owner's manual in its entirety before assembly or use.

Parts of the lathe.

The lathe consists of a number of major parts, which are discussed in this manual. Take the time to read this section and become familiar with the machine.

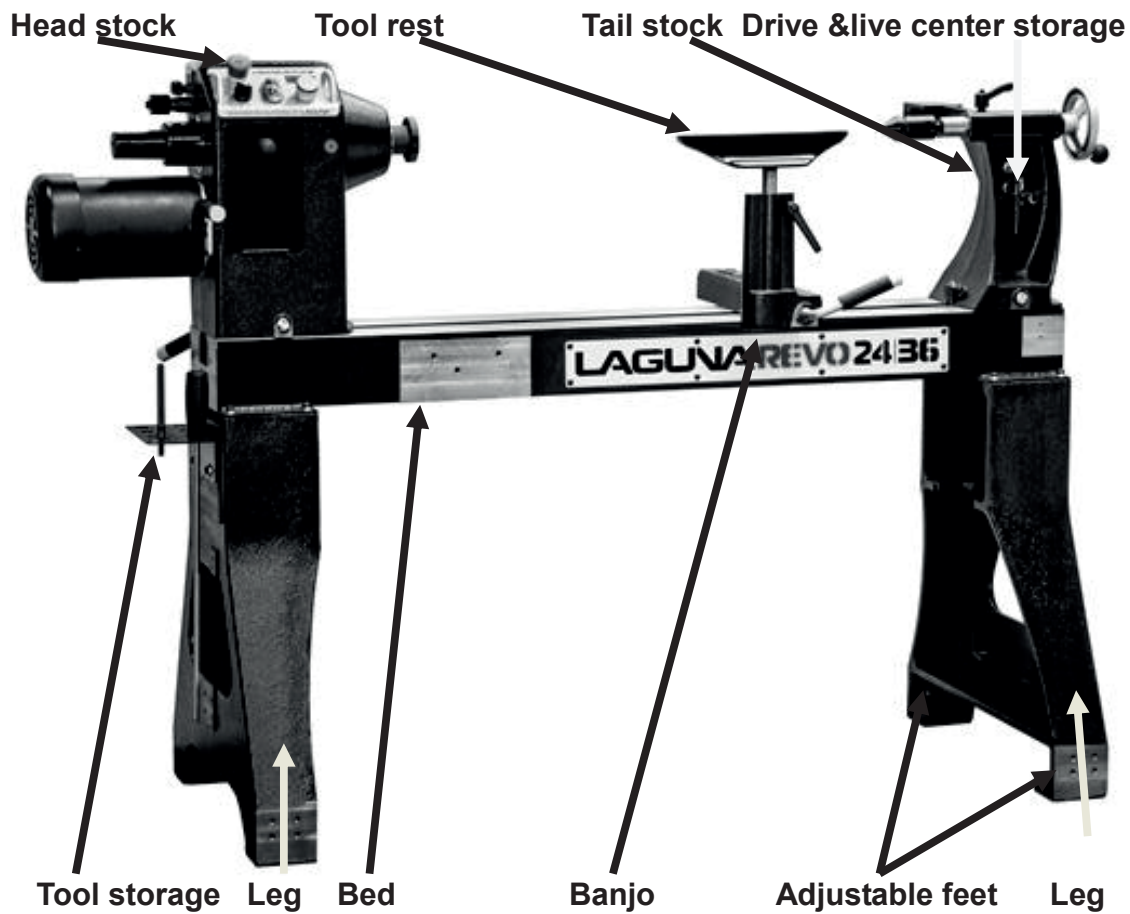

Identification.


There is a plate at the back of the machine listing all the manufacturing data, including the serial number, model, etc.

M30 x 3.5 Spindle Thread for Australia.

LAGUNA CE UK CA Wood Lathe		
Model	REVO 24 36	
Power	1~230V 50Hz 9A P2=2.2kw S1	
Specification	 n _c =0 - 3500 /min SCCR=6k A M33x3.5 / MT-2 / ϕ 10.5mm	
Article No. LAGUNA-L-0016	Weight	242kg
Series No.	Year	
LAGUNA TOOLS 2072 Alton Parkway. Irvine, CA 92606 www.lagunatools.com		

Lathe Bed.

The bed is a machined heavy steel welded construction.

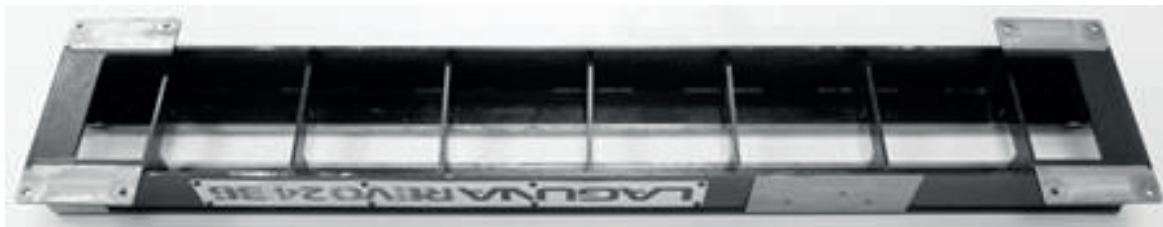

Underside of lathe bed

Lathe legs.


The Legs are cast iron, and their heavy construction gives the machine a low center of gravity and ensures that it is very stable. The legs are supplied with adjustable feet to allow the machine to be leveled.



Legs with adjustable feet assembled

Head stock.

The head stock is cast iron and houses the variable speed control and motor. The Spindle can be locked in 14 / 36 and 48 positions.

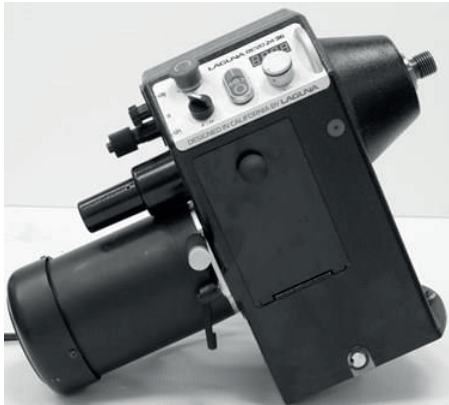

Headstock removed from the bed



Head or remote selection switch

Tail stock.

The tail stock is of cast iron construction, and the spindle has a travel of 4 1/2 in. It can accommodate centers and other tools which have a number 2 Morse Taper. The tail stock can be moved to any position on the lathe bed and locked to suit the job at hand.



Tailstock viewed from the back



Tailstock viewed from the front

Tool rest.

The tool rest can be moved to any position on the lathe bed and locked to suit the job at hand. The tool rest has a tall profile to allow the bowl turner to turn steep angles. The leading edge is made from 6mm hardened steel.



Tool rest assembled to the bed



Tool rest

Electrical system.

220V: The electrical control system (VFD) is housed at the back of the head stock, The VFD converts single phase 220v to three phase. There is a speed readout at the front of the lathe with controls to fine adjust the RPM of the spindle. . A power cord with 220V plug is provided. There are two electrical sockets to the side of the VFD..



VFD with cover open



Power sockets


Tool storage.

A tool storage bracket which can be mounted on either leg.



Tool storage bracket

What you will receive with the lathe.

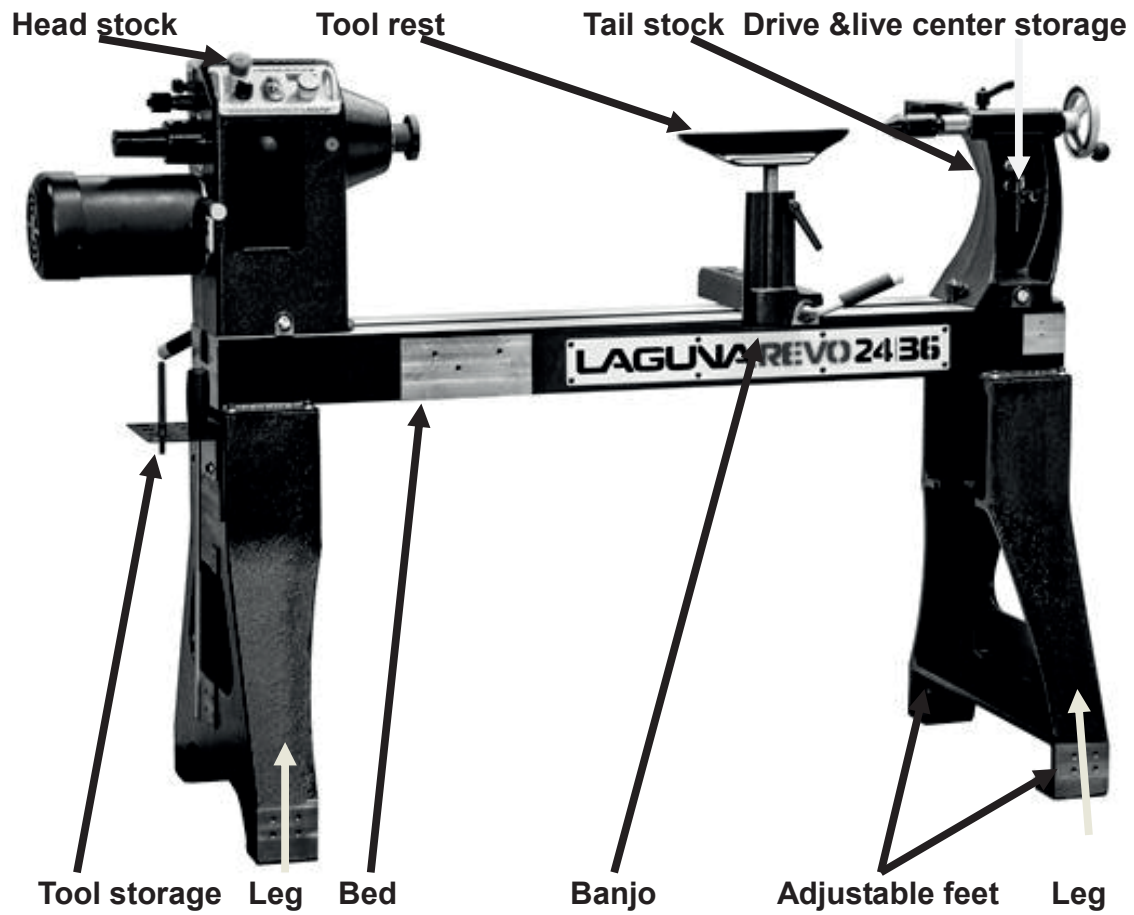


Remote controller

Face plate Tool rack Rotating center Adjustable feet Tail stock bracket



Removal tool Drive center Knock out rod Head stock bracket
Tail stock knob Tool rest comes fitted to banjo

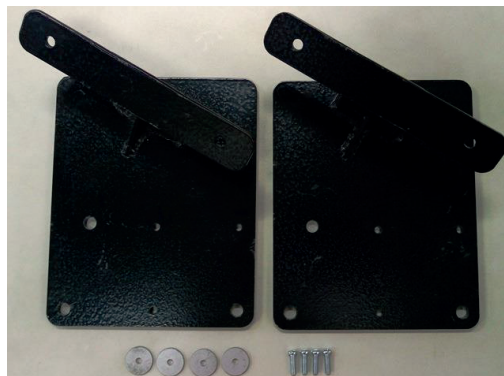

Remote brackets and hardware

Where to locate your machine.

Before you remove your machine from the packaging, select the area where you will use your machine. There are no hard and fast rules for its location, but below are a few guidelines:

1. There should be sufficient area at the front of the machine to allow you to work on it comfortably.
2. There should be sufficient area at the back of the machine to allow access for adjustments and maintenance to be conducted.
3. Adequate lighting. The better the lighting the more accurately and safely you will be able to work.
4. Solid floor. You should select a solid flat floor, preferably one made of concrete or something similar.
5. Locate it close to a power source and dust collection.
6. Allow an area for the storage of blanks, finished products and tools.


Unpacking your machine.

To unpack your machine you will need tin snips, a knife, and a wrench.

1. Using the tin snips, cut the banding that is securing the packing box (if fitted). **WARNING: EXTREME CAUTION MUST BE USED, BECAUSE THE BANDING WILL SPRING AND COULD CAUSE INJURY.**



Lathe in packaging

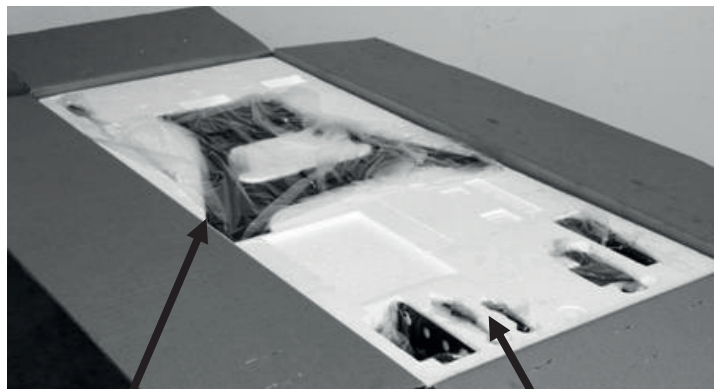

Leg

Parts of the lathe

Second leg



Top packaging removed

2. Open the box and remove the parts sent with the lathe including the first leg.

Note. The legs are heavy and caution must be exercised. They are cast iron and if dropped they will break.

3. Remove the top packaging and remove the second leg.

4. Remove the lathe bed. It is recommended that it be lifted with a hoist or forklift using a "sling" as it is very heavy.

Note. The machine is heavy. Ensure that you have enough people to do the job safely.

Note. If you have any doubt about the described procedure, seek professional assistance. Do not attempt any procedure that you feel is unsafe, or that you do not have the physical capability of achieving.



5. Lower the bed of the lathe onto 2 stacks of wood. This will allow access to the underside of the bed.

Assembly and setup.

The machine comes mostly assembled. You will have to assemble the legs, headstock, tailstock, tool storage and the tool rest to the bed of the machine.


Note. It is recommended that the head stock, tool rest and tailstock be removed from the bed of the lathe to ease assembly (Covered later in the manual).

Assembling the legs to the bed of the lathe.

There is a stop at both ends of the bed. The stop is a safety feature that makes it impossible for the headstock or tailstock to slide off the end of the bed.

Remove the stops and loosen the clamps on both the head stock, tool rest and tailstock. Slide them off the bed. This will greatly reduce the weight of the bed and allow easier assembly.


Note: The headstock and tailstock are very heavy and extreme caution must be exercised when removing them from the bed of the lathe. Take care not to cause damage during removal.

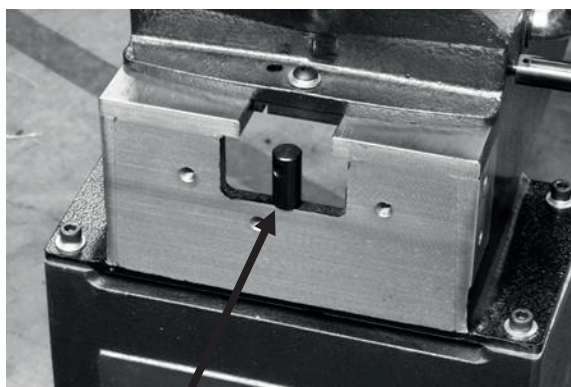


Stop



Tailstock clamp handle

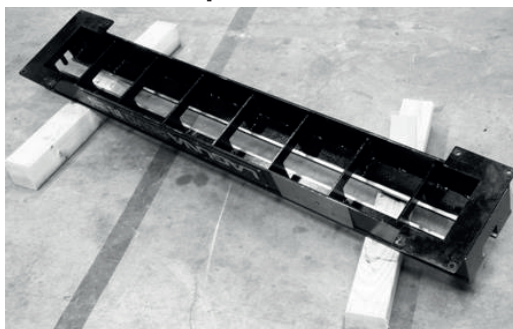

Bed with headstock and tailstock removed

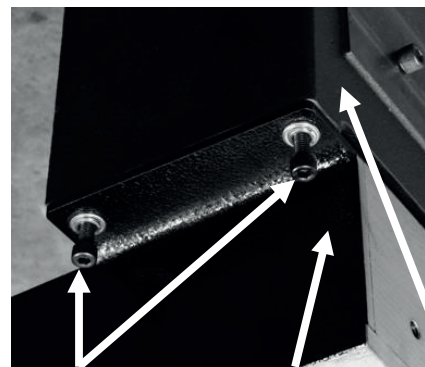

Leg fixing screws

Bed

Leg


Lay the bed on 2" X 4" timbers in the upside down position. Lift the legs to the vertical position and lower them onto the bed. Secure with the fixing screws provided.

Note. At least two people will be needed to perform the assembly, one to hold the leg in position and one to fit the fixing screws.

Note. If you have any doubt about the described procedure, seek professional assistance. Do not attempt any procedure that you feel is unsafe, or that you do not have the physical capability of achieving.

Fit the 4 leveling feet to the lathe legs with the lock nut on the underside of the leg.

Once both legs have been fitted turn the assembly up to the correct position.

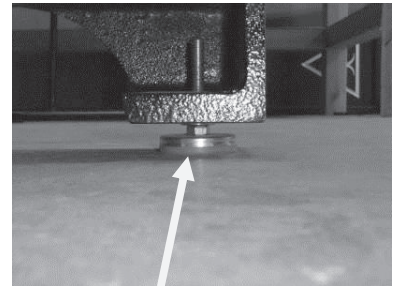

Leveling foot



Assemble the head stock, tool rest and tailstock back onto the bed of the lathe and **fit the stops.**

Note. If you have any doubt about the described procedure, seek professional assistance. Do not attempt any procedure that you feel is unsafe, or that you do not have the physical capability of achieving.



Assembled lathe


If you decide to fit the tool rest after fitting the tail stock, follow the below procedure.
Fit the tool rest onto the bed of the lathe ensuring that the washer recess fits into the slot in the bed.

Fit the banjo onto the bed with the bolt through the washer and assemble the nut onto the thread.

Adjust the nut so that the clamp handle locks the banjo with approximately 30 degree of movement.



Tool rest

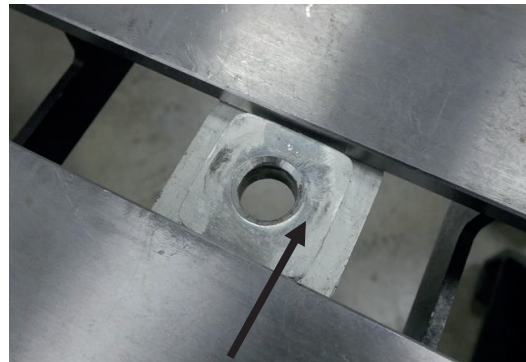

Washer



Washer assembled in position



Tool rest clamp handle


Banjo clamp handle

Fitting the stock knob.

Screw the tail stock knob onto the tail stock handle.



Tail stock knob

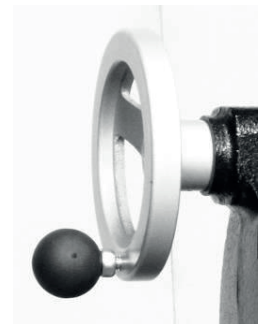


Tail stock handle

Connecting the electrical supply.

Ensure that the electrical supply corresponds with that of the machine (Single phase 220V).

It is recommended that you use a 15-amp main breaker.

Note. A qualified electrician must carry out the installation.

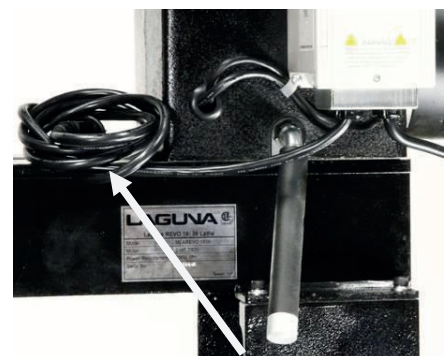


Electrical cable

Fitting the remote controller.

The remote controller can be fitted in either of two positions, attached to the tail stock or attached to the tailstock leg.


Fitting the remote controller to the tailstock leg.

1. Fit the support plate to the bed by removing the two clamp bolts and with the two clamp screws secure the support plate.
2. Fit the remote controller with the clamping supplied screws.
3. Ensure that the cable is clear of any obstruction.

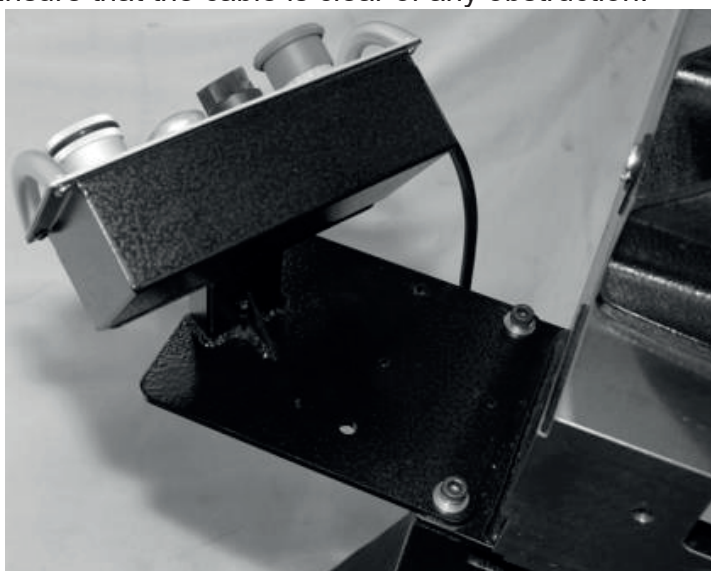

Fitting the remote controller to the tailstock.

1. Fit the support plate to the tailstock bracket with the clamp screws supplied.
2. Fit the remote controller with the clamping supplied screws.
3. Ensure that the cable is clear of any obstruction.

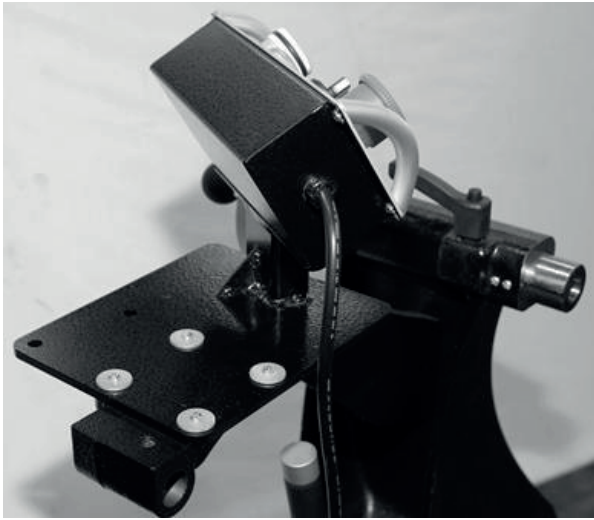

Note. The headstock can only be controlled by one controller and you must select which controller is used by selecting with the controller selection switch.



Controller selection switch

Cleaning the machine.

Remove the rust protection grease with WD 40 or a similar solvent. It is important that you remove all the grease and re-lubricate with a Teflon-based lubricant. (Teflon has a lower tendency to attract sawdust and cause clogging).

Fitting the rotating center.

Ensure that the bore of the tail stock is clean. The rotating center has a number 2 Morse Taper that fits into the tail stock.

Push the center into the tail stock bore firmly, and ensure that it is securely located. To remove the center, rotate the adjusting handle until it is as far back as possible and this will eject the center.

Rotating center



Adjusting handle

Fitting the drive center into the head stock.

Do not attempt to remove faceplate without removing set screws. The set screws set on a flat part of the spindle. Forcing the faceplate off while set screws are set or not completely removed away from threading can damage the lathe spindle.

To remove the face plate from the head stock spindle, insert the removal tool into the hole in the face plate large diameter. Lock the spindle with the lathe spindle lock and unlock the face plate by rotating it. Take care not to drop the faceplate onto the bed of the lathe.


Ensure that the bore of the head stock is clean. The drive center has a number No. 2 Morse Taper that fits into the head stock. Push the center into the head stock bore firmly, and ensure that it is securely located.

To remove the center, push the removal shaft into the back of the head stock, and give it a sharp knock. This will remove the drive center.

Note. Never leave the removal shaft in the head stock with the machine running.



Removal tool

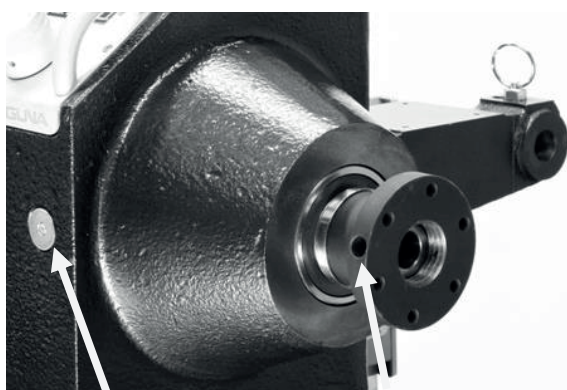


Spindle lock


Face plate hole



Lathe spindle lock

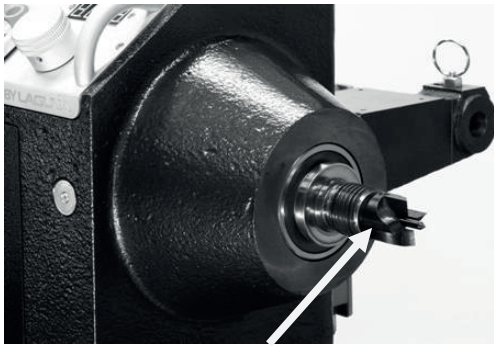

Headstock drive center

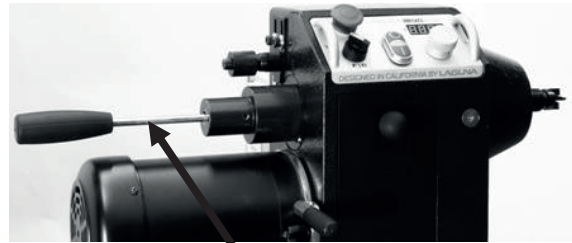

Drive center removal shaft

Fitting the face plate.

Reverse the removal procedure, described earlier.

Lathe controls.

Emergency stop button

The emergency stop button will lock in the OFF position when fully depressed. To reset it, twist clockwise and it will pop out.

Forward / reverse switch.

The forward / reverse switch selects the direction of the rotation of the spindle.

The forward / reverse switch must only be used once the spindle has come to a complete stop.

Start / Stop buttons.

The start / stop buttons start the motor and the rotation of the spindle.

Speed display.

The speed display shows the RPM of the spindle.

Variable speed adjustment knob.

The Variable speed adjustment knob adjusts the spindle speed.



Head stock clamp lever

Head stock clamp lever.

The head stock clamp lever allows the head stock to be released and moved to any position on the lathe bed. It is located at the back of the head stock.

Variable speed adjustment knob.



Increase speed

Decrease speed

The Variable speed adjustment knob adjusts the spindle speed. Turns clockwise to increase the speed, turns counter-clockwise to decrease the speed

High / low speed.

The lathe has two sets of pulleys for high (135 - 3500 RPM) and low (50 - 1300 RPM) speed ranges.

Adjust between the speed ranges as follows.


1. Disconnect the electric supply to the lathe.
2. Open the pulley cover.

3. Loosen the motor lock handle and lift the motor to the highest position with the motor adjustment handle, then lock the motor lock handle.


4. Move the drive belt to the required set of pulleys.

5. Loosen the motor lock handle and with the motor adjustment handle tension the drive belt, then lock the motor lock handle.


The belt should be tensioned so that there is approximately 1/8 to 1/4 " deflection when the belt is pressed with moderate thumb pressure.

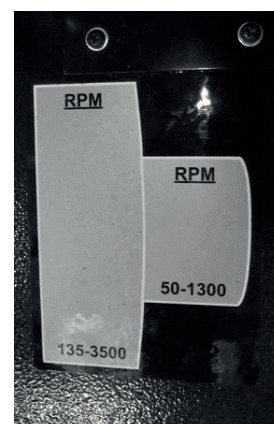


Speed range

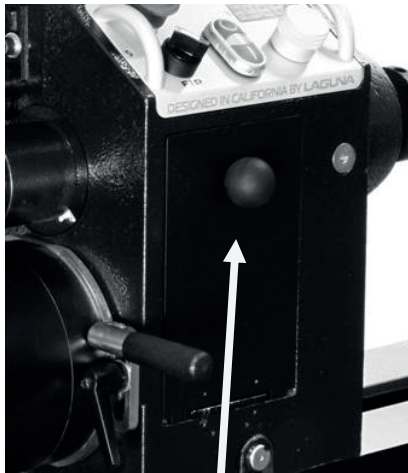

Pulley cover

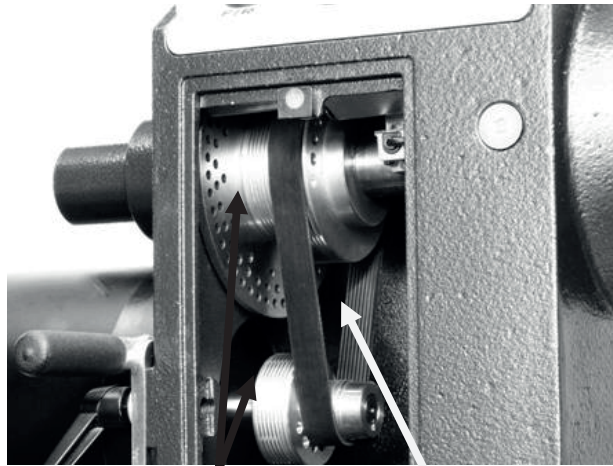

Pulleys and drive belt

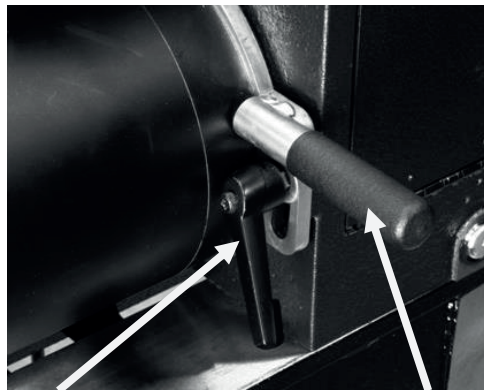

Motor lock handle

Motor adjustment handle


Indexing the spindle.

The spindle has 3 sets of indexing holes 14 / 36 / 48. The selection plunger is located at the end of the head stock. To move between the 3 sets of holes, loosen the clamp knobs and slide the indexing plunger assembly to align with the selected hole set. Clamp in position with the clamp knobs. Try the plunger in a few different holes to check that it inserts and removes smoothly.

The indexing plunger is spring loaded and this is used only to temporarily align the plunger in the selected hole.


To fix the plunger in a selected hole, it must be attached to the housing by screwing into the clamped position.

There is a hole selection indicator that allows you to view which hole in a selected hole set has been selected.

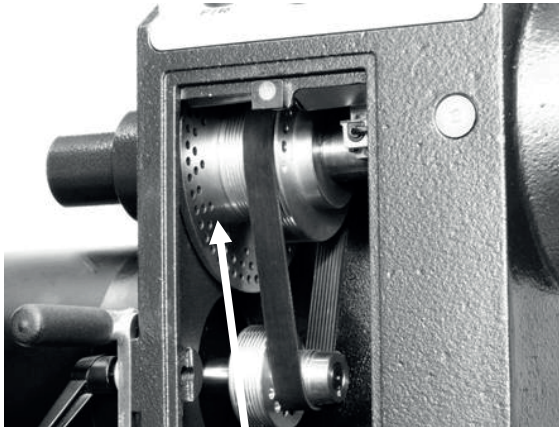


Indexing holes

Clamping knobs
Hole selection indicator

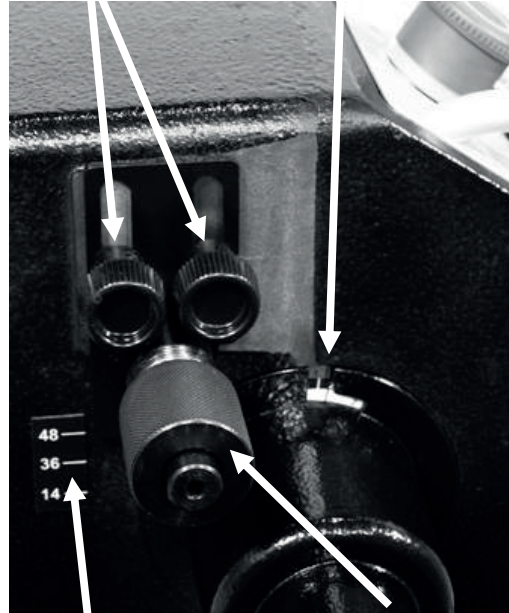


Hole selection

Indexing plunger

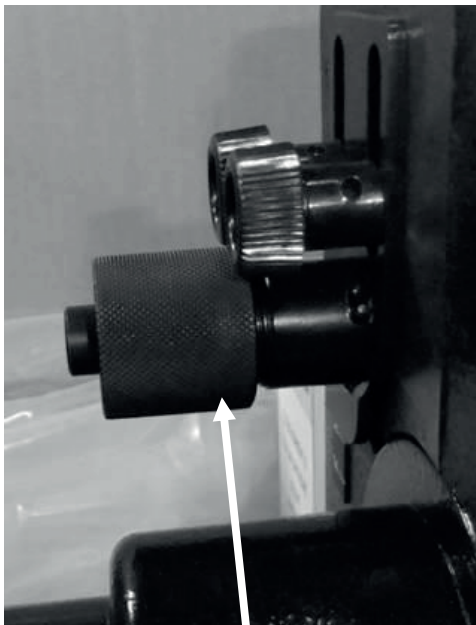

Indexing plunger engaged

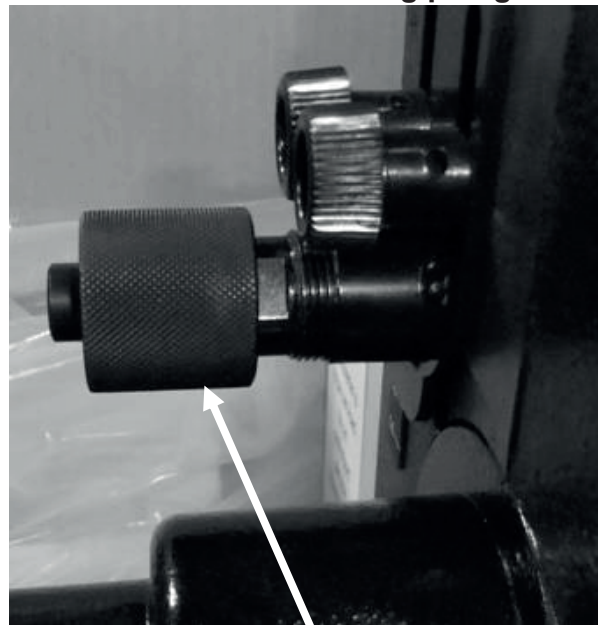

Indexing plunger disengaged

Maintenance.

General.

Keep your machine clean. At the end of each day, clean the machine. Wood contains moisture, and if sawdust or wood chips are not removed they will cause rust. In general, we recommend that you only use a Teflon-based lubricant on the lathe. Regular oil attracts dust and dirt. Teflon lubricant tends to dry and has less of a tendency to accumulate dirt and saw dust.

Periodically check that all nuts and bolts are tight.

Drive belt.

The drive belt should last for many years (depending on the usage) but needs to be inspected regularly for cracks, cuts and general wear. If damage is found, replace the belt.

Bearings.

All bearings are sealed for life and do not require any maintenance. If a bearing becomes faulty, replace it.


Rust.

The lathe is made from steel and cast iron. All none-painted surfaces will rust if not protected. It is recommended that they be protected by applying wax or a Teflon- based lubricant to them.

Center point alignment and slide clearance adjustment.

The center point alignment and slide clearance are adjusted at the factory and no adjustment should be required. Should movement or wear have taken place, the following adjustment procedure should be conducted.

Note. The slide clearance of the headstock and the tailstock must be checked and adjusted should it be needed prior to adjusting the center point alignment.

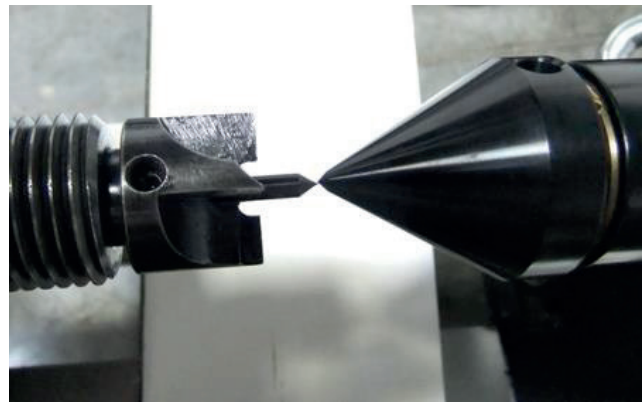

Center points aligned

Slide adjustment.

Loosen the clamp handle on the tailstock and check for side movement. If it is excessive, Insert an Allen key into the adjusting screw and tighten.

Note. By rotating the adjustment screw, it moves into the adjusting slot which opens and removes the excessive clearance between the tailstock and the bed.

Note. Only make very small adjustments and then recheck the clearance. After adjustment

the tailstock should be slid along the bed to check for any area that it binds in the bed slot.

The same procedure as above should be conducted on the head stock should it be required.

Note. It is very unlikely that the headstock will require adjustment as it is not moved as often as the tailstock, so has less tendencies for ware.

Adjustment slot




View under the tailstock

Adjustment slot



View under headstock

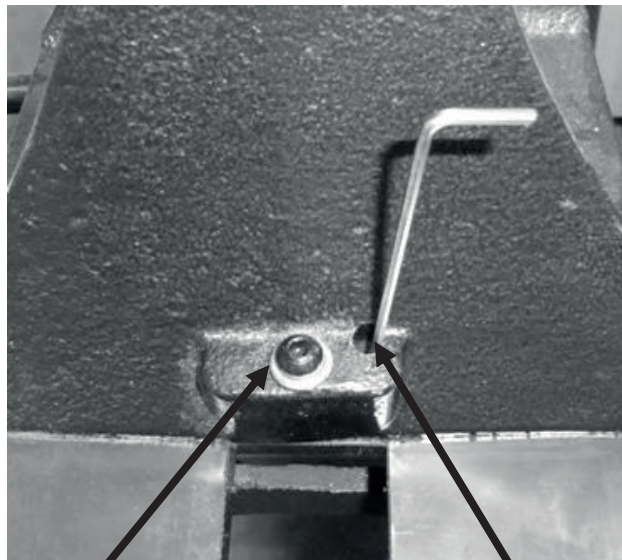

Clamp screw

Adjusting screw

Center point alignment.

The tailstock has two clamp screws that are accessible from the top of the tailstock.


The clamp screws hold the slide plate to the tailstock casting. There is clearance in the holes that allows the tailstock to be moved in relation to the slide plate. The headstock also has two clamp screws, but one is accessible from under the headstock.

By loosening the clamp screws the headstock and tailstock can be moved and the center points aligned.

Note. It is recommended that the head stock be adjusted and not the tail stock. If the tail stock is not adjusted parallel to the bed slide, the center point will not be in alignment when the spindle is extended or retracted.

1. Loosen the clamp screw that is accessible from the top on the head stock.
2. Tap the side of the headstock with a rubber mallet close to the base in the direction requiring adjustment and retighten the clamp screw.
3. Recheck the center point alignment and repeat if required.

Note. Never hit any part of the lathe that is cast iron with a metal hammer or similar as it **will** break the casting.

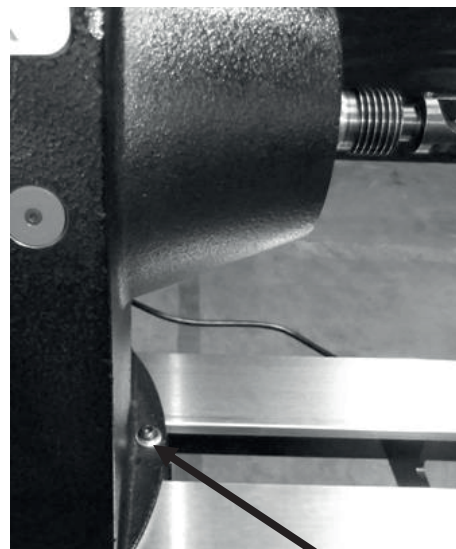

Headstock clamp screw

Troubleshooting.

Lathe will not start.

1. Check that the start switch is in the correct position.
2. Check that the electrical power cord is plugged into the power outlet.
3. Check that the electrical supply is on (reset the breaker).
4. With the power disconnected from the machine, check that the wiring to the plug is correct. Check that the rubber insulation is stripped enough and is not causing a bad connection. Check that all the screws are tight.
5. Emergency stop button engaged. Reset emergency stop button. Twist and it will pop out.

The machine will not stop.

This is a very rare occurrence as the machine is designed to be fail-safe. If it should occur and you cannot fix the fault, seek professional assistance. The machine must be disconnected from the power and never run until the fault has been rectified.

1. The stop switch is faulty. Replace the stop switch.

Motor tries to start but will not turn.

1. With the power disconnected from the machine, try to turn the spindle by hand. If the spindle will not turn, check the reason for jamming.
2. Capacitor faulty. Replace the capacitor.
3. Motor faulty. Replace the motor.
4. Power line overloaded. Correct overloaded condition.
5. Low voltage. Correct low voltage condition.

Motor overheats.

The motor is designed to run hot, but should it overheat it has an internal thermal overload protector that will shut it down until the motor has cooled, and then it will reset automatically. If the motor overheats, wait until it has cooled and restart. If the motor shuts down consistently check for the reason. Typical reasons are dull cutting tools, the motor cooling fan being clogged or faulty, the motor cooling fins are clogged, overfeeding the job, and excessive ambient temperature.

Squeaking noise.

1. Check that the motor cooling fan is not contacting the fan cover.
2. Check the bearings.
3. Check the drive belt is tensioned correctly.


Spindle slows down during a cut.

1. Dull cutting tools. Replace the tool or have it re-sharpened.
2. Feeding the wood too fast. Slow down the feed rate.
3. Oil or dirt on the drive belt. Clean or replace the drive belt.
4. Drive belt loose. Re-tension drive belt.

Machine vibrates.


1. Machine not level on the floor. Re-level the machine ensuring that it has no movement.
2. Damaged drive belt. Replace the belt.
3. Job is not balanced. Change to slower speed and/ or balance the job.
4. Damaged pulley. Replace the pulley.
5. Worn spindle bearing. Replace the bearing.

Electrical drawing.

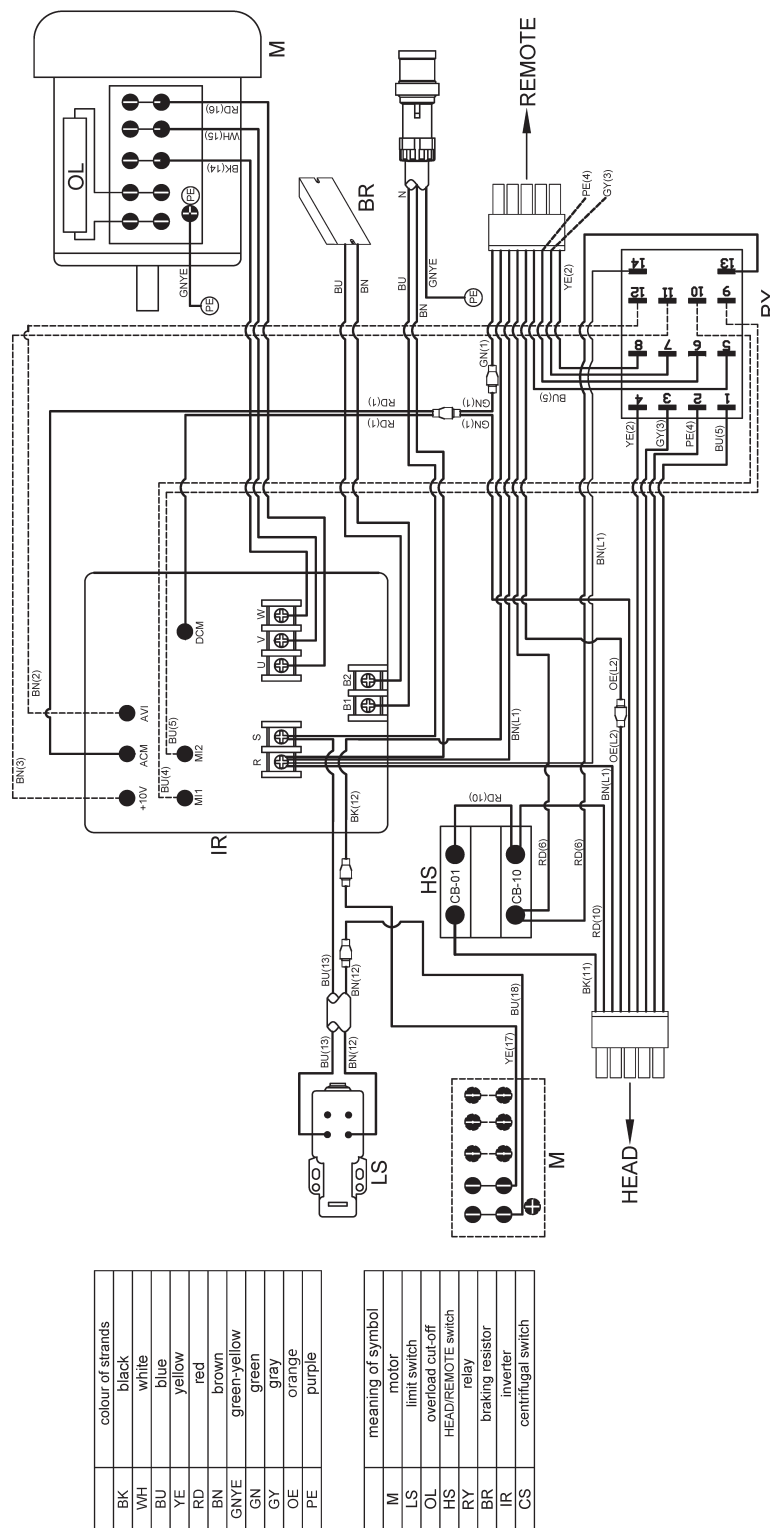


Manufacturer: Laguna Tools, Inc.	Product Name: Wood Lathe	Model: REVO 24 36	Version: 2022-01
Drawing Originator: Ting	Checker: Ting	Authorizes: Alan Huang	File no.: LAGUNA-L-0016

Wiring diagram for control panel on headstock.

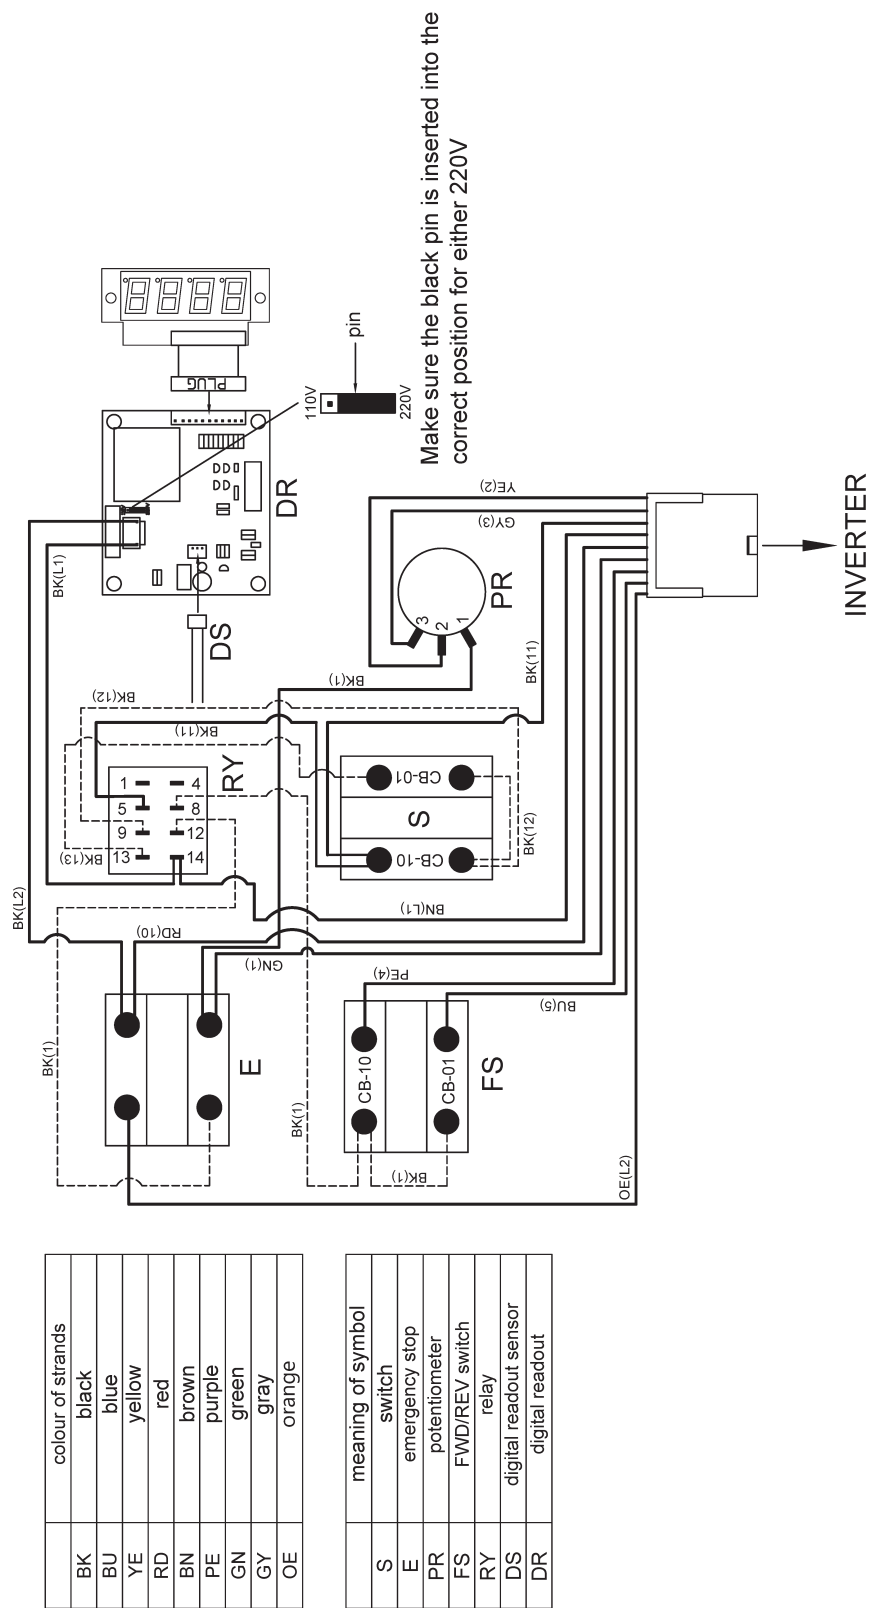

Manufacturer: Laguna Tools, Inc.	Product Name: Wood Lathe	Model: REVO 24 36	Version: 2022-01
Drawing Originator: Ting	Checker: Ting	Authorizes: Alan Huang	File no.: LAGUNA-L-0016

Wiring diagram for remote control.

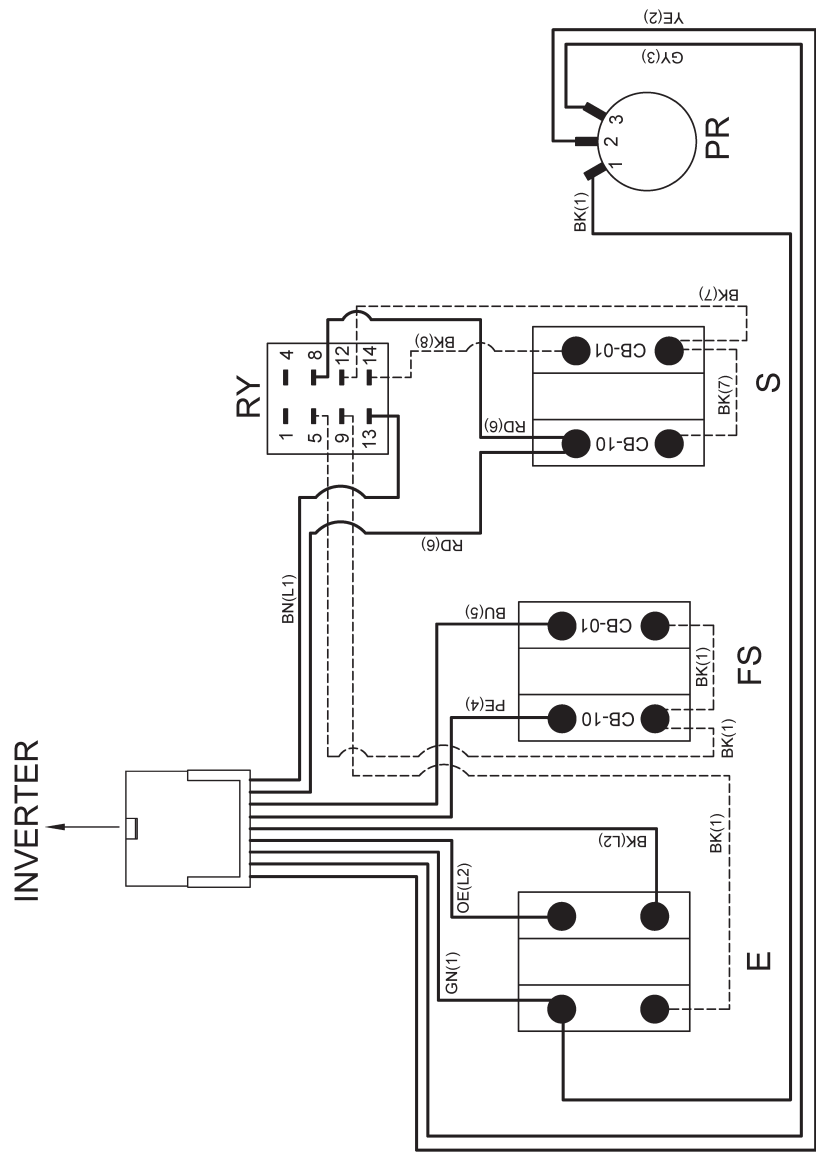



	colour of strands
BK	black
BU	blue
YE	yellow
RD	red
BN	brown
PE	purple
GN	green
GY	gray
OE	orange

	meaning of symbol
S	switch
E	emergency stop
PR	potentiometer
FS	FWD/REV switch
RY	relay

Manufacturer: Laguna Tools, Inc.	Product Name: Wood Lathe	Model: REVO 24 36	Version: 2022-01
Drawing Originator: Ting	Checker: Ting	Authorizes: Alan Huang	File no.: LAGUNA-L-0016

Exploded view drawings and parts list.

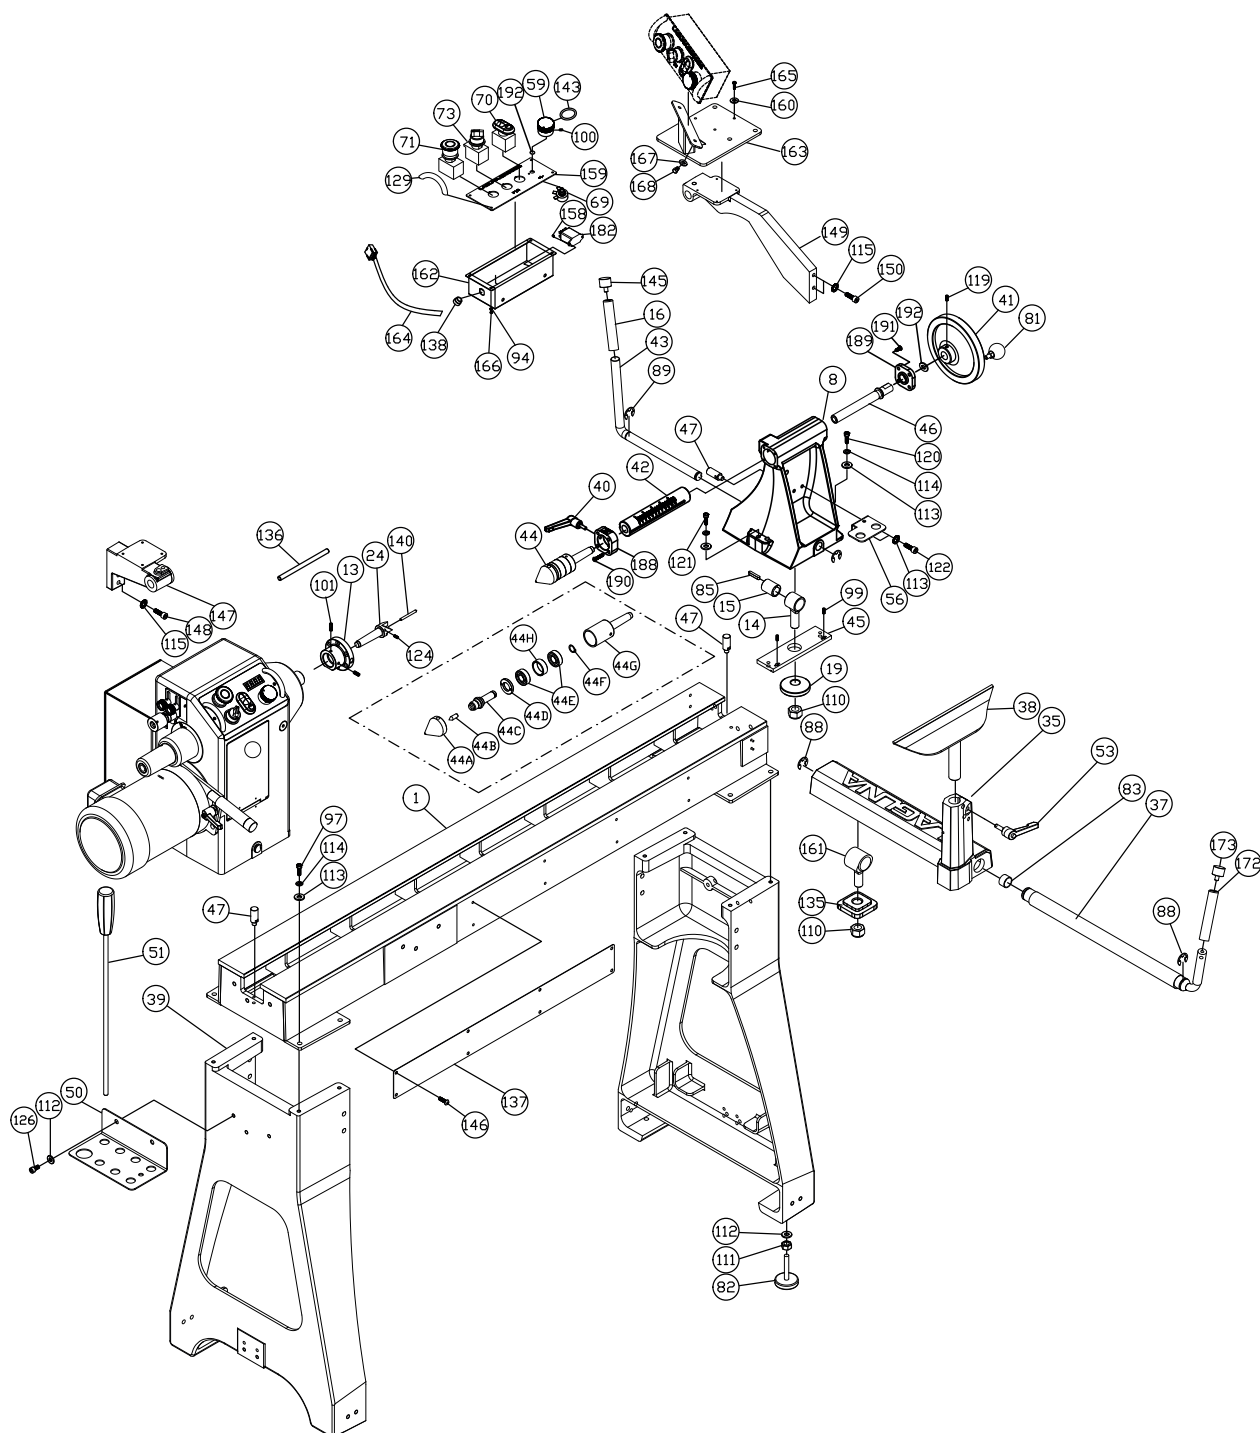

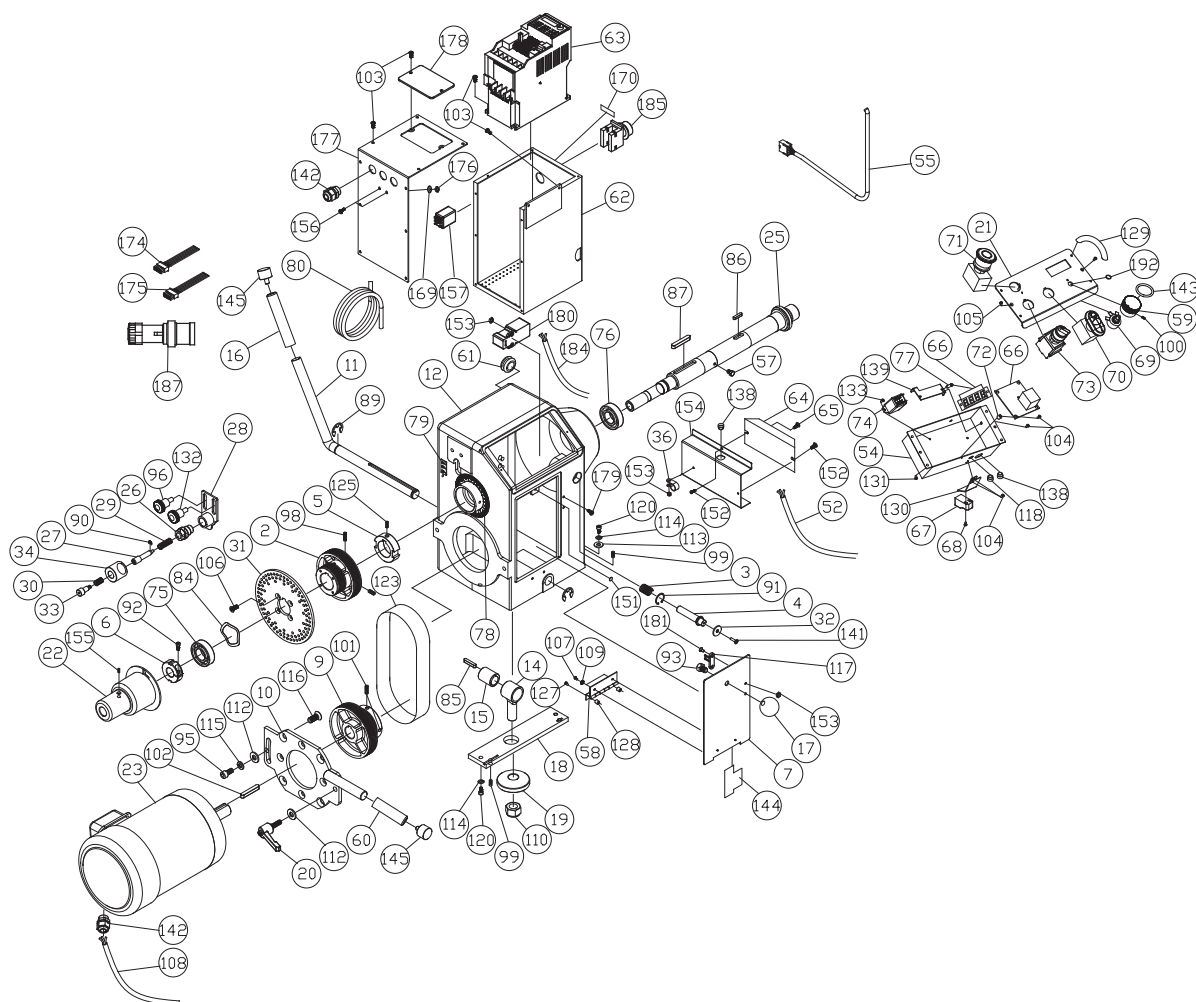

Parts List for REVO 24 36 Lathe				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-101	Bed		1
2	PLAREVO1836-102	Spindle Pulley		1
3	PLAREVO1836-103	Spring		1
4	PLAREVO1836-104	Spindle Lock Plunger		1
5	PLAREVO1836-105	Locking Collar		1
6	PLAREVO1836-106	Bearing Nut		1
7	PLAREVO1836-107-UK	Door		1
8	PLAREVO2436-220-108A	Tailstock		1


9	PLAREVO1836-109	Motor Pulley		1
10	PLAREVO2436-220-110	Motor Plate		1
11	PLAREVO1836-111	Headstock Locking Handle		1
12	PLAREVO2436-220-112-UK	Headstock		1
13	PLAREVO1836-113-UK	3" Faceplate		1
14	PLAREVO1836-114	Clamp Bolt		2
15	PLAREVO1836-115	Sleeve		2
16	PLAREVO1836-116	Rubber Sleeve		2
17	PLAREVO1836-117	Knob		1
18	PLAREVO1836-118	Headstock Adjusting Plate		1
19	PLAREVO1836-119	Clamp		2
20	PLAREVO1836-120	Lock Handle		1
21	PLAREVO2436-220-121	Control Panel		1
22	PLAREVO1836-122	Handwheel		1
23	PLAREVO2436-220-123-UK	Motor		1
24	PLAREVO1836-124	Spur Center		1
25	PLAREVO1836-125-UK	Spindle		1
26	PLAREVO1836-126	Index Stud		1
27	PLAREVO1836-127	Index Shaft		1
28	PLAREVO1836-128	Index Bracket		1
29	PLAREVO1836-129	Spring		1
30	PLAREVO1836-130	Spring		1
31	PLAREVO1836-131	Index Plate		1
32	PLAREVO1836-132	Disc, Spindle Lock		1
33	PLAREVO1836-133	Index Bolt		1
34	PLAREVO1836-134	Index Knob		1
35	PLAREVO2436-220-135	Tool Rest Support Base		1
37	PLAREVO2436-220-137	Tool Rest Locking Handle		1
38	PLAREVO1836-138	12" Tool Rest		1
39	PLAREVO2436-220-139	Leg		2
40	PLAREVO1836-140A	Lock Handle		1
41	PLAREVO1836-141	Handwheel		1
42	PLAREVO1836-142A	Quill		1
43	PLAREVO1836-143	Tailstock Locking Handle		1
44	PLAREVO1836-144	Live Center Assembly		1
45	PLAREVO1836-145	Tailstock Adjusting Plate		1

46	PLAREVO1836-146	Lead Screw		1
47	PLAREVO1836-147	Stop Bolt		3
50	PLAREVO1836-150	Tool Caddy		1
51	PLAREVO1836-151	Knockout Rod		1
52	PLAREVO1836-152-UK	Braking Resistor Cord		1
53	PLAREVO1836-153	Lock Handle		1
54	PLAREVO1836-154	Control Box		1
55	PLAREVO2436-220-155	Control Cord		1
56	PLAREVO1836-156	Tailstock Tool Caddy		1
57	PLAREVO1836-157	Hex Cap Screw	M6x6	4
58	PLAREVO1836-158	Door Hinge		1
59	PLAREVO1836-159	Speed Knob		2
60	PLAREVO1836-160	Rubber Sleeve		1
61	PLAREVO1836-161	Rubber Bushing		1
62	PLAREVO2436-220-162-UK	Control Box		1
63	PLAREVO2436-220-163-UK	Inverter		1
64	PLAREVO1836-164	Braking Resistor		1
65	PLAREVO1836-165	Screw	M4x12	1
66	PLAREVO1836-166	Digital Readout		1
67	PLAREVO1836-167	Digital Readout Sensor		1
68	PLAREVO1836-168	Screw	M3x20	2
69	PLAREVO1836-169	Control Pot Assembly		2
70	PLAREVO1836-170	ON/ OFF Switch		2
71	PLAREVO1836-171	Emergency Stop		2
72	PLAREVO1836-172	Spacer		2
73	PLAREVO1836-173	Fwd/Rev Switch		2
74	PLAREVO1836-174	Relay		1
75	PLAREVO1836-175	Ball Bearing	6205LLU	1
76	PLAREVO2436-220-176	Ball Bearing	6307LLU	1
77	PLAREVO1836-177	Pillar		2
78	PLAREVO1836-178	Index Label		1
79	PLAREVO1836-179	Index Indicator		1
80	PLAREVO2436-220-180-UK	Power Cord		1
81	PLAREVO1836-181	Knob		1
82	PLAREVO1836-182	Leveling Foot		4
83	PLAREVO2436-220-183	Bushing		1


84	PLAREVO1836-184	Wave Washer	6205	1
85	PLAREVO1836-185	Key	6x6x30	2
86	PLAREVO1836-186	Key	8x7x25	1
87	PLAREVO1836-187	Key	8x7x60	1
88	PLAREVO2436-220-188	E-Ring	E24	2
89	PLAREVO1836-189	E-Ring	E15	4
90	PLAREVO1836-190	E-Ring	E5	1
91	PLAREVO1836-191	C-Ring	R22	1
92	PLAREVO1836-192	Socket Head Cap Screw	1/4-20UNCx1"	1
93	PLAREVO1836-193	Hex Cap Screw	3/8-16UNCx1/2"	1
94	PLAREVO2436-220-194	Washer, Lock-Int. Tooth	M3	4
95	PLAREVO1836-195	Socket Head Cap Screw	3/8-16UNCx1"	1
96	PLAREVO1836-196	Knob		1
97	PLAREVO1836-197	Socket Head Cap Screw	5/16-18UNCx1"	8
98	PLAREVO1836-198	Set Screw	5/16-18UNCx3/8"	2
99	PLAREVO1836-199	Set Screw	M8x6	4
100	PLAREVO1836-1100	Set Screw	M4x4	2
101	PLAREVO1836-1101	Set Screw	1/4-20UNCx1/4	4
102	PLAREVO1836-1102	Key	5x5x50	1
103	PLAREVO1836-1103-1	Screw	M4x8	16
104	PLAREVO1836-1104	Screw	M3x8	6
105	PLAREVO1836-1105	Socket Flat Head Screw	M3x8	2
106	PLAREVO1836-1106	Phillips Flat Head Screw	M6x16	4
107	PLAREVO1836-1107	Screw	M3x4	2
108	PLAREVO1836-1108-UK	Motor Cord		1
109	PLAREVO1836-1109	Flat Washer	D3xD8x1t	2
110	PLAREVO1836-1110	Nylon Insert Lock Nut	M18x2.5	3
111	PLAREVO1836-1111	Hex Nut	3/8-16UNC	4
112	PLAREVO1836-1112	Flat Washer	D10xD23x2t	8
113	PLAREVO1836-1113	Flat Washer	D8xD18x2t	13
114	PLAREVO1836-1114	Lock Washer	5/16"	12
115	PLAREVO1836-1115	Lock Washer	3/8"	5
116	PLAREVO1836-1116	Phillips Flat Head Screw	3/8-16UNCx3/4"	4
117	PLAREVO1836-1158	Safety Interlock Switch Pin		1
118	PLAREVO1836-1118	Strain Relief	2P-4	1
119	PLAREVO1836-1119	Set Screw	1/4-20UNCx3/8	1

120	PLAREVO1836-1120	Socket Head Button Screw	M8x30	3
121	PLAREVO1836-1121	Socket Head Button Screw	M8x45	1
122	PLAREVO1836-1122	Socket Head Cap Screw	5/16-18UNCx1/2"	2
123	PLAREVO2436-220-1123	Poly-V Belt	PJ8-200	1
124	PLAREVO1836-1124	Set Screw	M6x6	1
125	PLAREVO1836-1125	Set Screw	5/16-18UNCx1/4	1
126	PLAREVO1836-1126	Socket Head Button Screw	3/8-16UNCx5/8"	2
127	PLAREVO1836-1127	Screw	M3x12	2
128	PLAREVO1836-1128	Spacer		2
129	PLAREVO1836-1129	Handle		4
130	PLAREVO1836-1130	Sensor Bracket		1
131	PLAREVO1836-1131	Phillips Flat Head Screw	M3x4	4
132	PLAREVO1836-196	Knob		1
133	PLAREVO1836-1133	Screw	M3x4	1
135	PLAREVO2436-220-1135	Clamp		1
136	PLAREVO1836-1136	Handle, Faceplate		1
137	PLAREVO2436-220-1137	Logo Plate		1
138	PLAREVO1836-1138	Strain Relief	6N-4	2
139	PLAREVO1836-1139	Bracket		1
140	PLAREVO1836-1140	Thimble		1
141	PLAREVO1836-1141	Socket Flat Head Screw	M3x8	1
142	480BS-194	Strain Relief	PG-11	5
143	PLAREVO1836-1143	O-Ring	P29	2
144	PLAREVO1836-1144	Speed Label		1
145	PLAREVO1836-1145	Cap		3
146	PLAREVO1836-1146	Socket Head Button Screw	1/4-20UNCx3/8"	8
147	PLAREVO2436-220-1147	Headstock Bracket		1
148	PLAREVO1836-1148	Socket Head Cap Screw	3/8-16UNCx1-1/4"	2
149	PLAREVO2436-220-1149	Tailstock Bracket		1
150	PLAREVO1836-1150	Socket Head Cap Screw	3/8-16UNCx3/4"	2
151	PLAREVO1836-1151	Magnet		1
152	PLAREVO1836-1152	Screw	M4x6	2
153	PLAREVO1836-1153	Hex Nut	M4x0.7	5
154	PLAREVO1836-1154	Braking Resistor Cover		1
155	PLAREVO1836-1155	Set Screw	M6x12	2
156	PLAREVO1216-197	Screw	#10-32UNFx1/2"	2


157	PLAREVO2436-220-1157	Relay		1
158	PLAREVO2436-220-1158	Socket Head Button Screw	M3x6	1
159	PLAREVO2436-220-1159	Remote Control Panel		1
160	PLAREVO2436-220-1160	Flat Washer	D4xD20x2t	4
161	PLAREVO2436-220-1161	Clamp Bolt		1
162	PLAREVO2436-220-1162-UK	Remote Control Box		1
163	PLAREVO2436-220-1163	Bracket		2
164	PLAREVO2436-220-1164	Remote Control Cord		1
165	PLAREVO2436-220-1165	Screw	M4x12	4
166	PLAREVO2436-220-1166	Screw	M3x6	4
167	PLAREVO2436-220-1167	Washer, Lock-Int. Tooth	1/4"	2
168	PLAREVO2436-220-1168	Hex Cap Screw	1/4-20UNCx3/8"	2
169	PLAREVO1216-193	Washer, Lock-Int. Tooth	#10	2
170	PLAREVO2436-220-1170	Head/Remote Label		1
171	PLAREVO2436-220-1171	Cable Clamp(NO SHOW)		2
172	PLAREVO2436-220-1172	Rubber Sleeve		1
173	PLAREVO2436-220-1173	Cap		1
174	PLAREVO2436-220-1174-UK	Connector, Remote		1
175	PLAREVO2436-220-1175-UK	Connector, Head		1
176	PLAREVO1216-192	Hex Nut	#10-32UNF	2
177	PLAREVO2436-220-1177-UK	Control Box Cover		1
178	PLAREVO2436-220-1178	Tracking Window		1
179	PLAREVO1216-183	Screw	M4x20	2
180	PLAREVO1836-1160	Safety Interlock Switch	QKS2	1
181	PLAREVO1836-1157	Phillips Flat Head Screw	M4x10	2
182	PLAREVO2436-220-1182	Relay		1
184	PLAREVO2436-220-1184	Safety Interlock Switch Cord		1
185	PLAREVO2436-220-1185	Fwd/Rev Switch(KEY)		1
187	PLAREVO2436-220-1187	Plug		1
188	PLAREVO1836-1167	Adjusting Block		1
189	PLAREVO1836-1168	Adjusting Block		1
190	PLAREVO1836-1169	Socket Head Button Screw	3/16-24UNCx1"	4
191	PLAREVO1836-1170	Socket Head Button Screw	3/16-24UNCx5/8"	4
192	PLAREVO1836-1156	O-Ring	P14	2
193	PLAREVO1836-1174	Wave Washer	M19	1

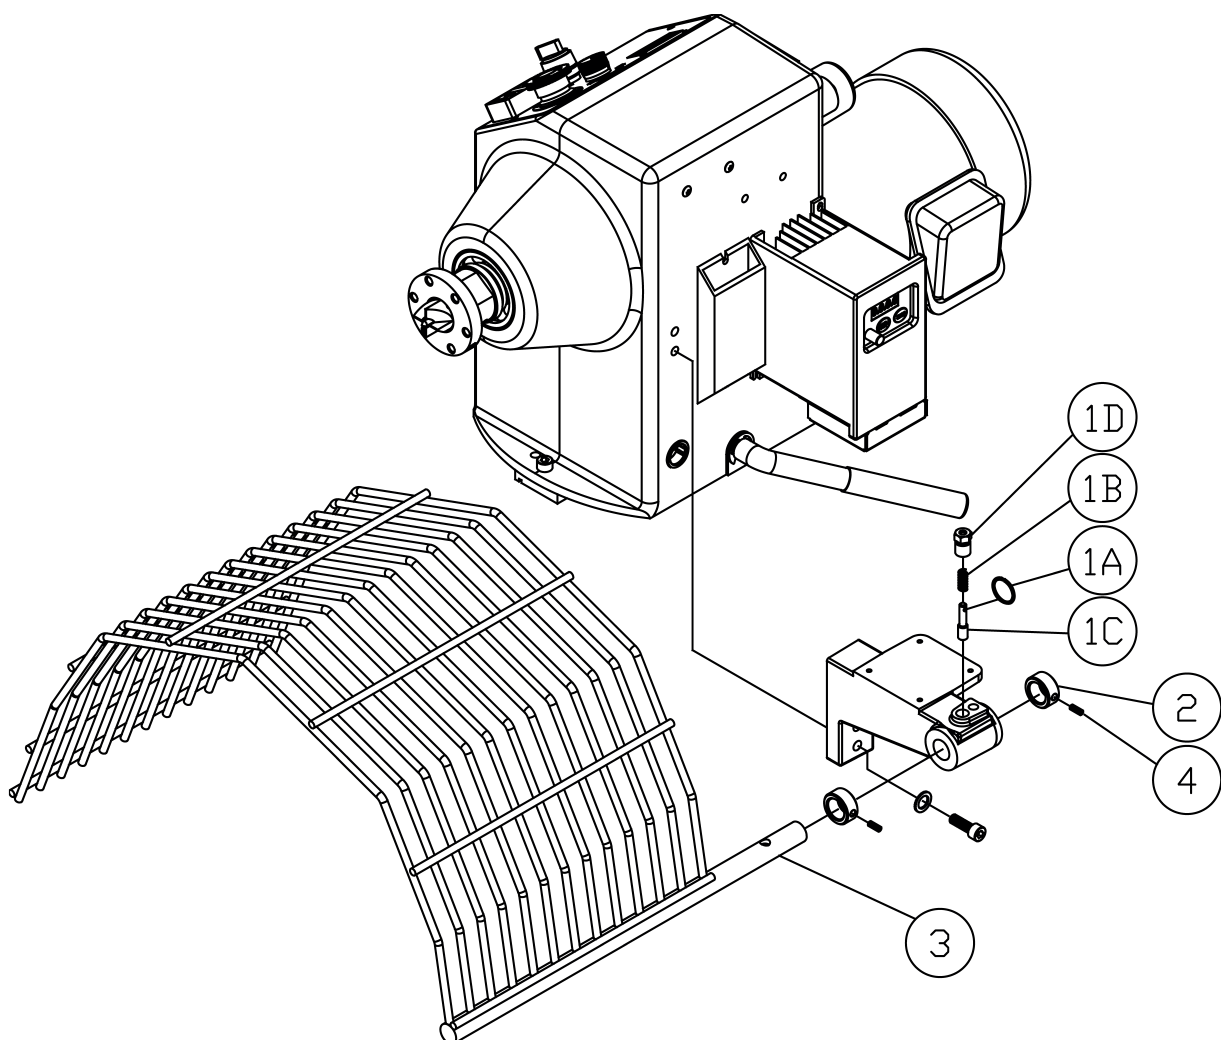


Optional Headstock Guard				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-201	Plunger		1
2	PLAREVO1836-202	Retaining Collar		2
3	PLAREVO2436-203	Guard		1
4	PLAREVO1836-1125	Set Screw	5/16-18UNCx1/4"	2

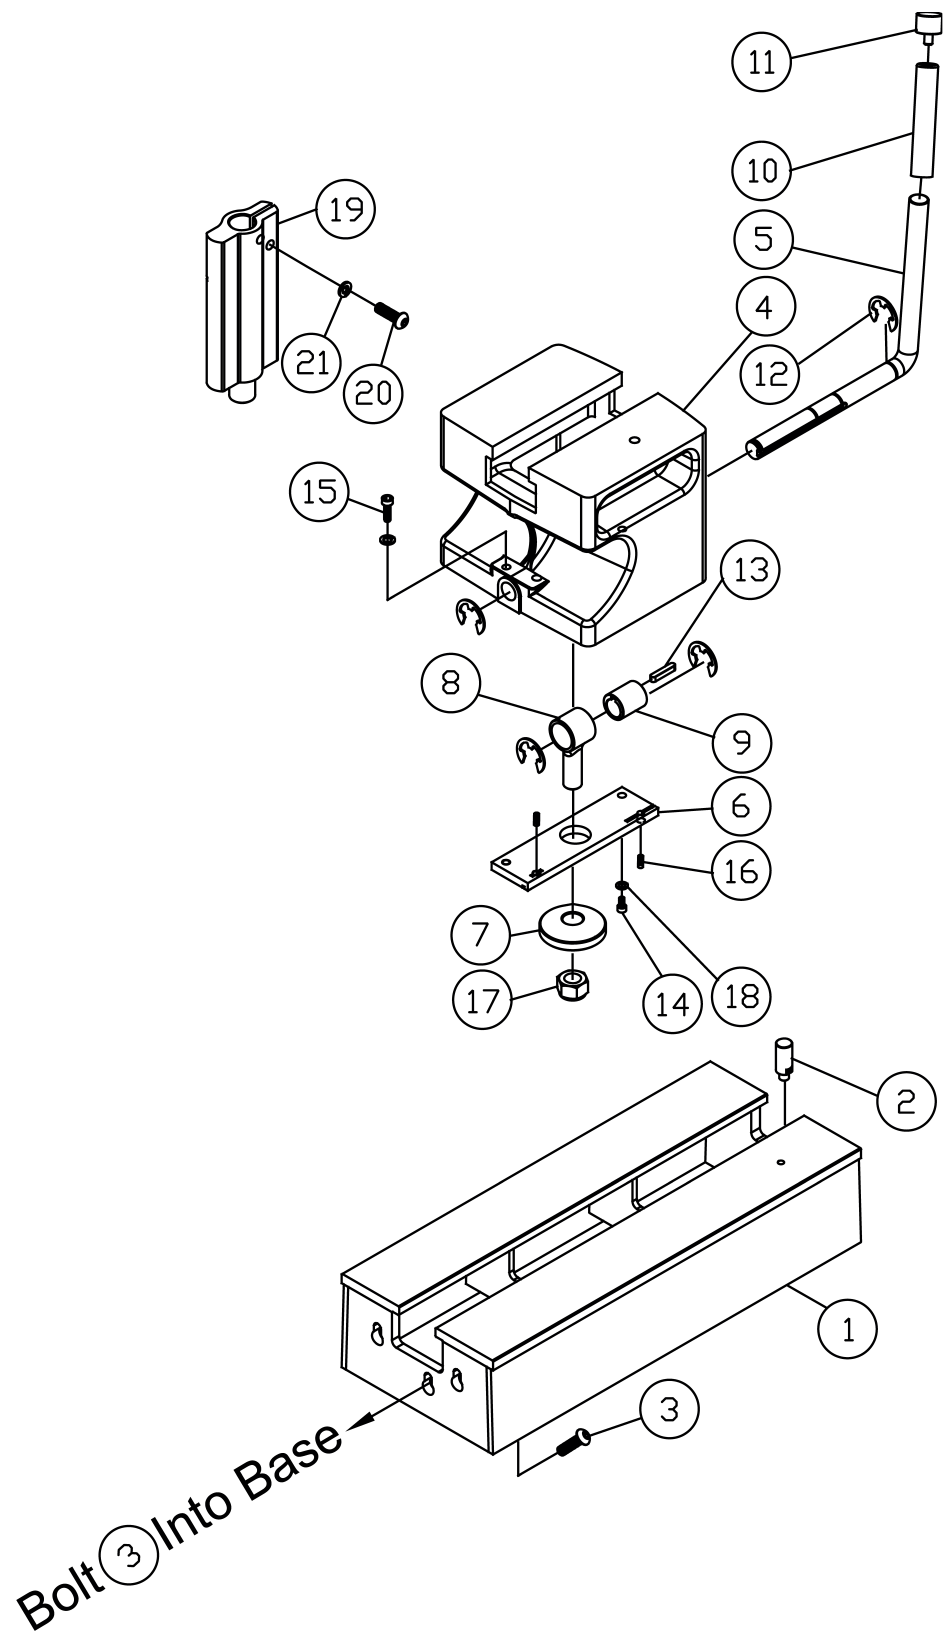


Optional 20" Bed Extension with Riser Block and Tool Rest Extension				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-301	20" Bed Extension		1
2	PLAREVO1836-147	Stop Bolt		2
3	PLAREVO1836-303	Socket Head Button Screw	3/8-16UNCx1"	3
4	PLAREVO1836-304	Riser Block		1
5	PLAREVO1836-305	Riser Block Locking Handle		1
6	PLAREVO1836-306	Riser Block Adjusting Plate		1
7	PLAREVO1836-119	Clamp		1
8	PLAREVO1836-114	Clamp Bolt		1
9	PLAREVO1836-115	Sleeve		1
10	PLAREVO1836-116	Rubber Sleeve		1
11	PLAREVO1836-1145	Cap		1
12	PLAREVO1836-189	E-Ring	E15	4
13	PLAREVO1836-185	Key	6x6x30mm	1
14	PLAREVO1836-194	Socket Head Button Screw	M8x1.25x20mm	1
15	PLAREVO1836-315	Socket Head Button Screw	M8x1.25x50mm	1
16	PLAREVO1836-199	Set Screw	M8x1.25x6mm	2
17	PLAREVO1836-1110	Nylon Insert Lock Nut	M18x2.5	1
18	PLAREVO1836-1114	Lock Washer	5/16"	2
19	PLAREVO1836-319	Tool rest Extension		1
20	PLAREVO1836-320	Socket Head Button Screw	3/8-16UNCx1-1/4"	1
21	PLAREVO1836-1115	Lock Washer	3/8"	1

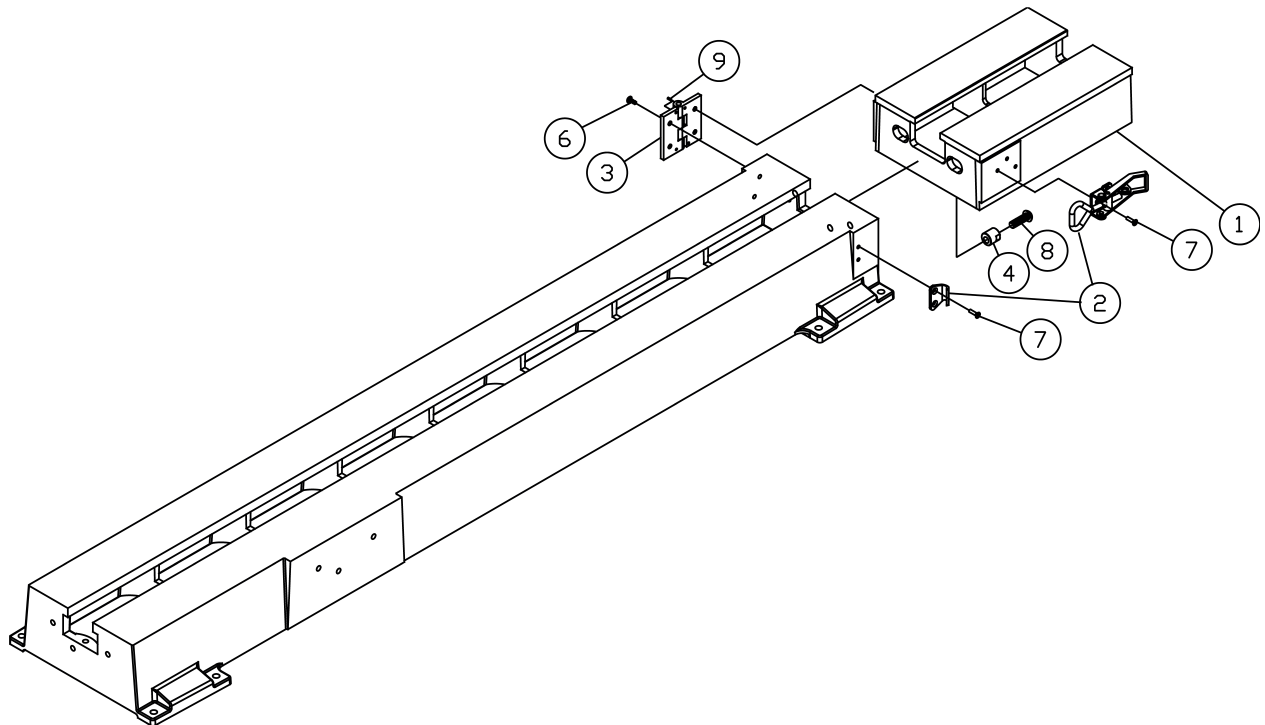


Optional 12" Swing-Away Extension				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-401	12" Bed Extension		1
2	PLAREVO1836-402	Draw Latch Assembly		1
3	PLAREVO1836-403	Hinge		1
4	PLAREVO1836-404	Pin		2
6	PLAREVO1836-406	Socket Head Cap Screw	M6x1.0x12mm	4
7	PLAREVO1836-407	Phillips Flat Head Screw	M5x0.8x12mm	5
8	PLAREVO1836-320	Socket Head Button Screw	3/8-16UNCx1-1/4"	2
9	PLAREVO1836-409	Set Screw	3/16-24UNCx3/8"	4

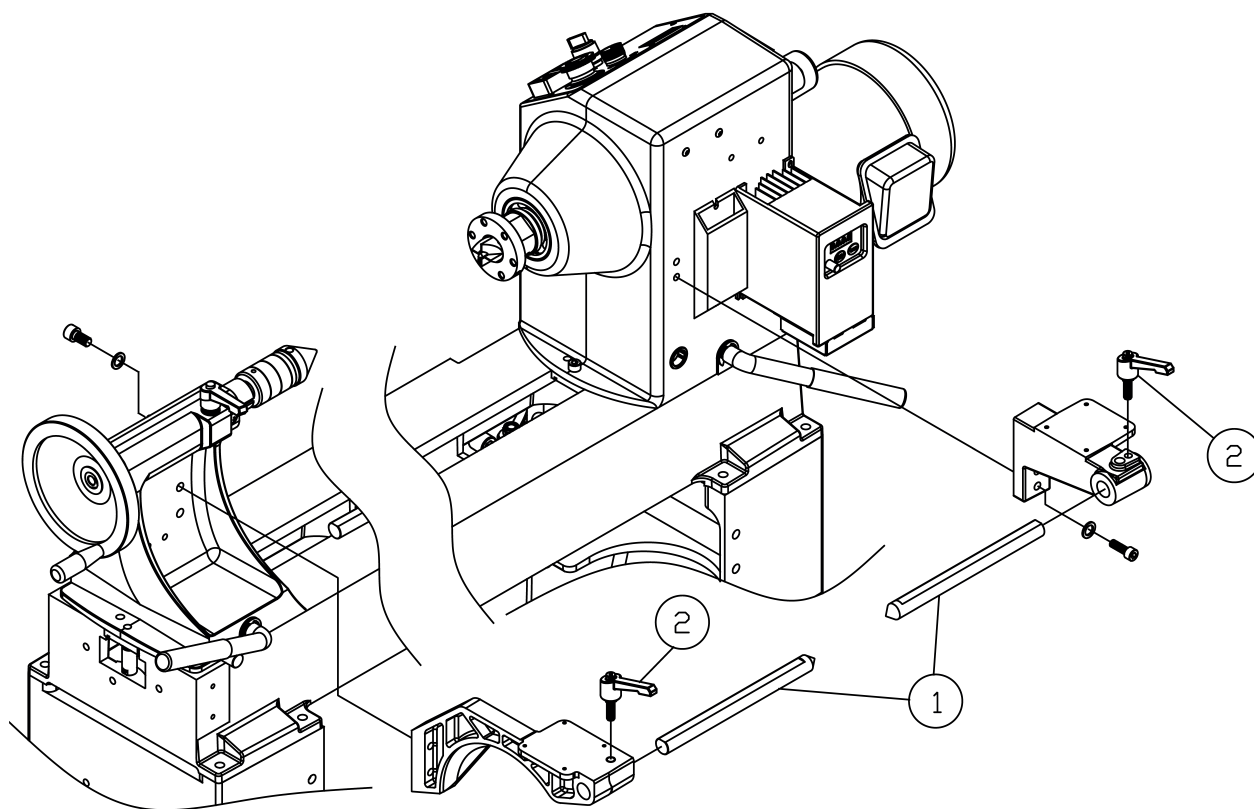


Optional Comparator				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-501	Center		2
2	PLAREVO1836-502	Lock Handle		2

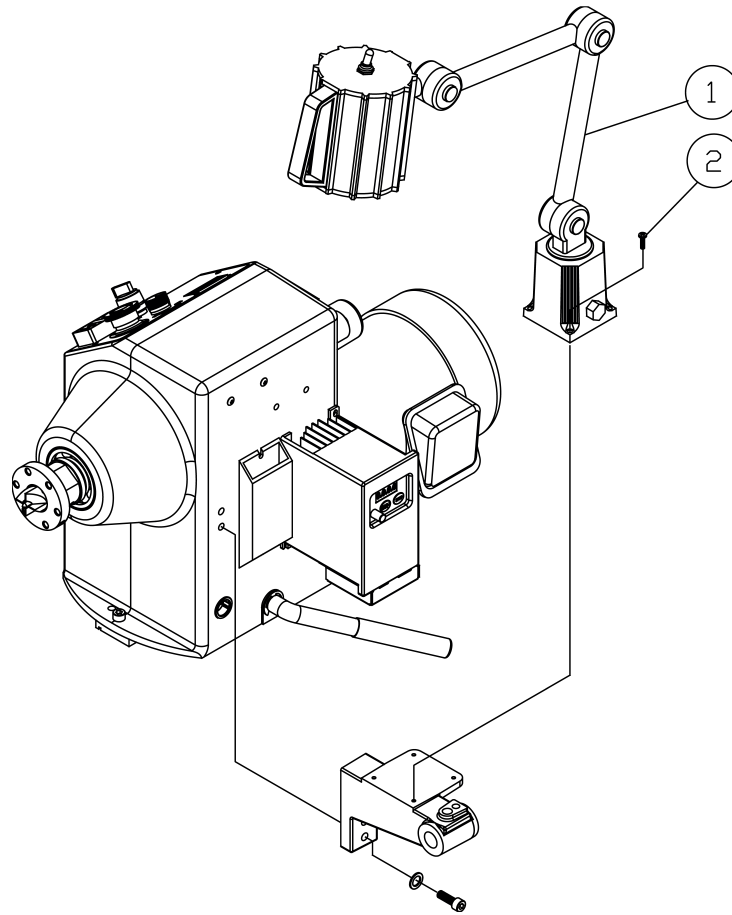

Optional Industrial Flood Light				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-601	Work Light		1
2	PLAREVO1836-602	Screw	M4x0.7x20mm	4

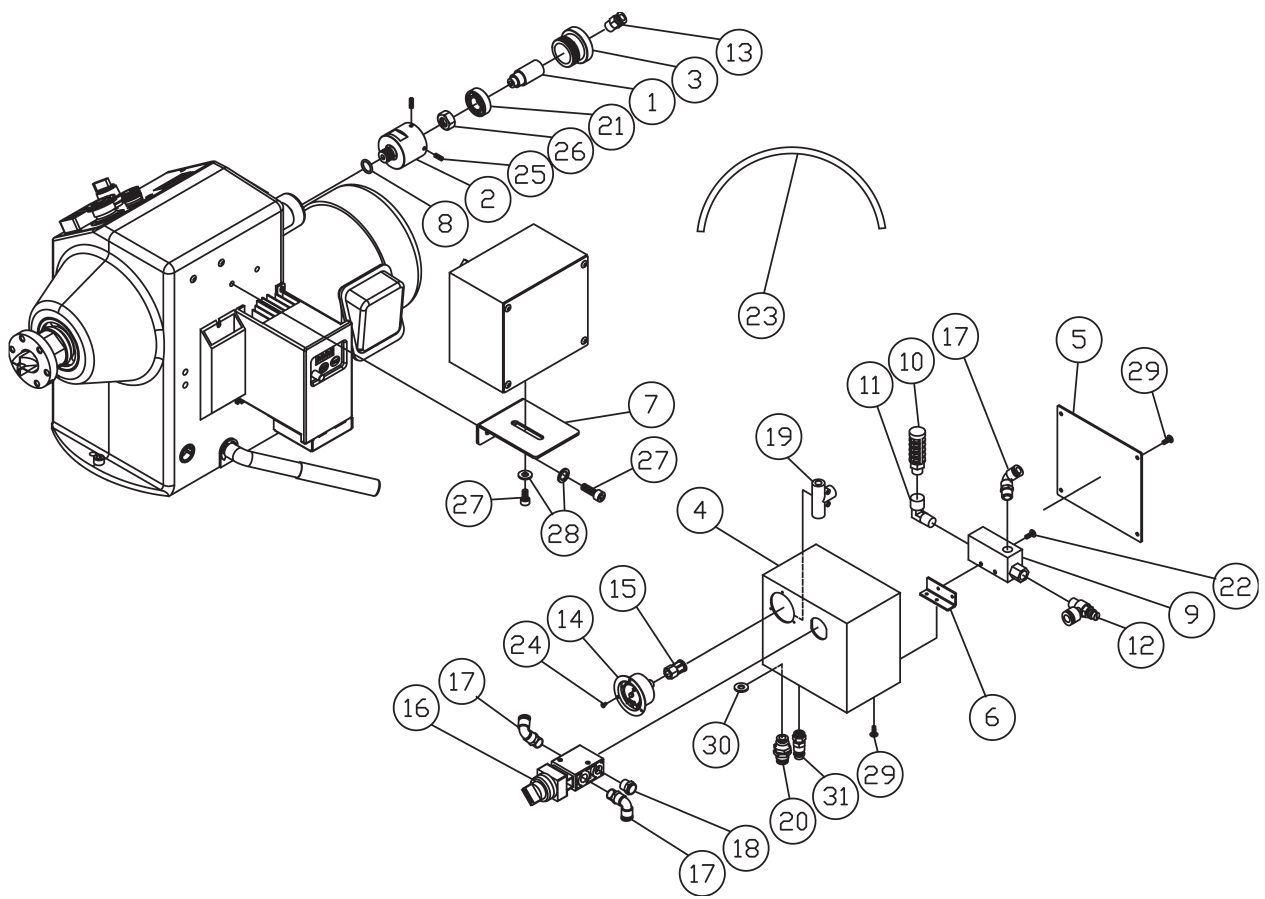

Optional Inverter for Vacuum				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-801	Connecting Shaft		1
2	PLAREVO1836-802	Vacuum Adaptor Body		1
3	PLAREVO1836-803	Cover		1
4	PLAREVO1836-804	Vacuum System Box		1
5	PLAREVO1836-805	Plate		1
6	PLAREVO1836-806	Vacuum Generator Bracket		1
7	PLAREVO1836-807	Vacuum System Bracket		1
8	PLAREVO1836-808	O-Ring	P14	1
9	PLAREVO1836-809	Vacuum Generator		1
10	PLAREVO1836-810	Silencer		1
11	PLAREVO1836-811	L-Type Fitting		1
12	PLAREVO1836-812	Air Flow Regulator		1
13	PLAREVO1836-813	Quick Release Fitting		1
14	PLAREVO1836-814	Pressure Vacuum Gauge		1
15	PLAREVO1836-815	Gauge Fitting		1
16	PLAREVO1836-816	Vacuum Switch		1
17	PLAREVO1836-817	H-Type Fitting		3
18	PLAREVO1836-818	Flat Type Silencer		1
19	PLAREVO1836-819	T-Type Fitting		1
20	PLAREVO1836-820	Straight Fitting-Female		1
21	PLAREVO1836-821	Ball Bearing	6003LLU	1
22	PLAREVO1836-822	Screw	M4x0.7x30mm	2
23	PLAREVO1836-823	Air Hose		1
24	PLAREVO1836-824	Screw	M2.5x0.45x5mm	3
25	PLAREVO1836-825	Set Screw	M5x0.8x5mm	2
26	PLAREVO1836-826	Hex Nut	M12x1.75	1
27	PLAREVO1836-827	Socket Head Cap Screw	5/16-18UNCx1/2"	4
28	PLAREVO1836-1113	Flat Washer	D8xD18x2t	4
29	PLAREVO1836-829	Screw	M4x0.7x10mm	6
30	PLAREVO1836-830	Flat Washer	D1/2"xD26x2.5t	1
31	PLAREVO1836-831	Quick Fitting- Inlet		1

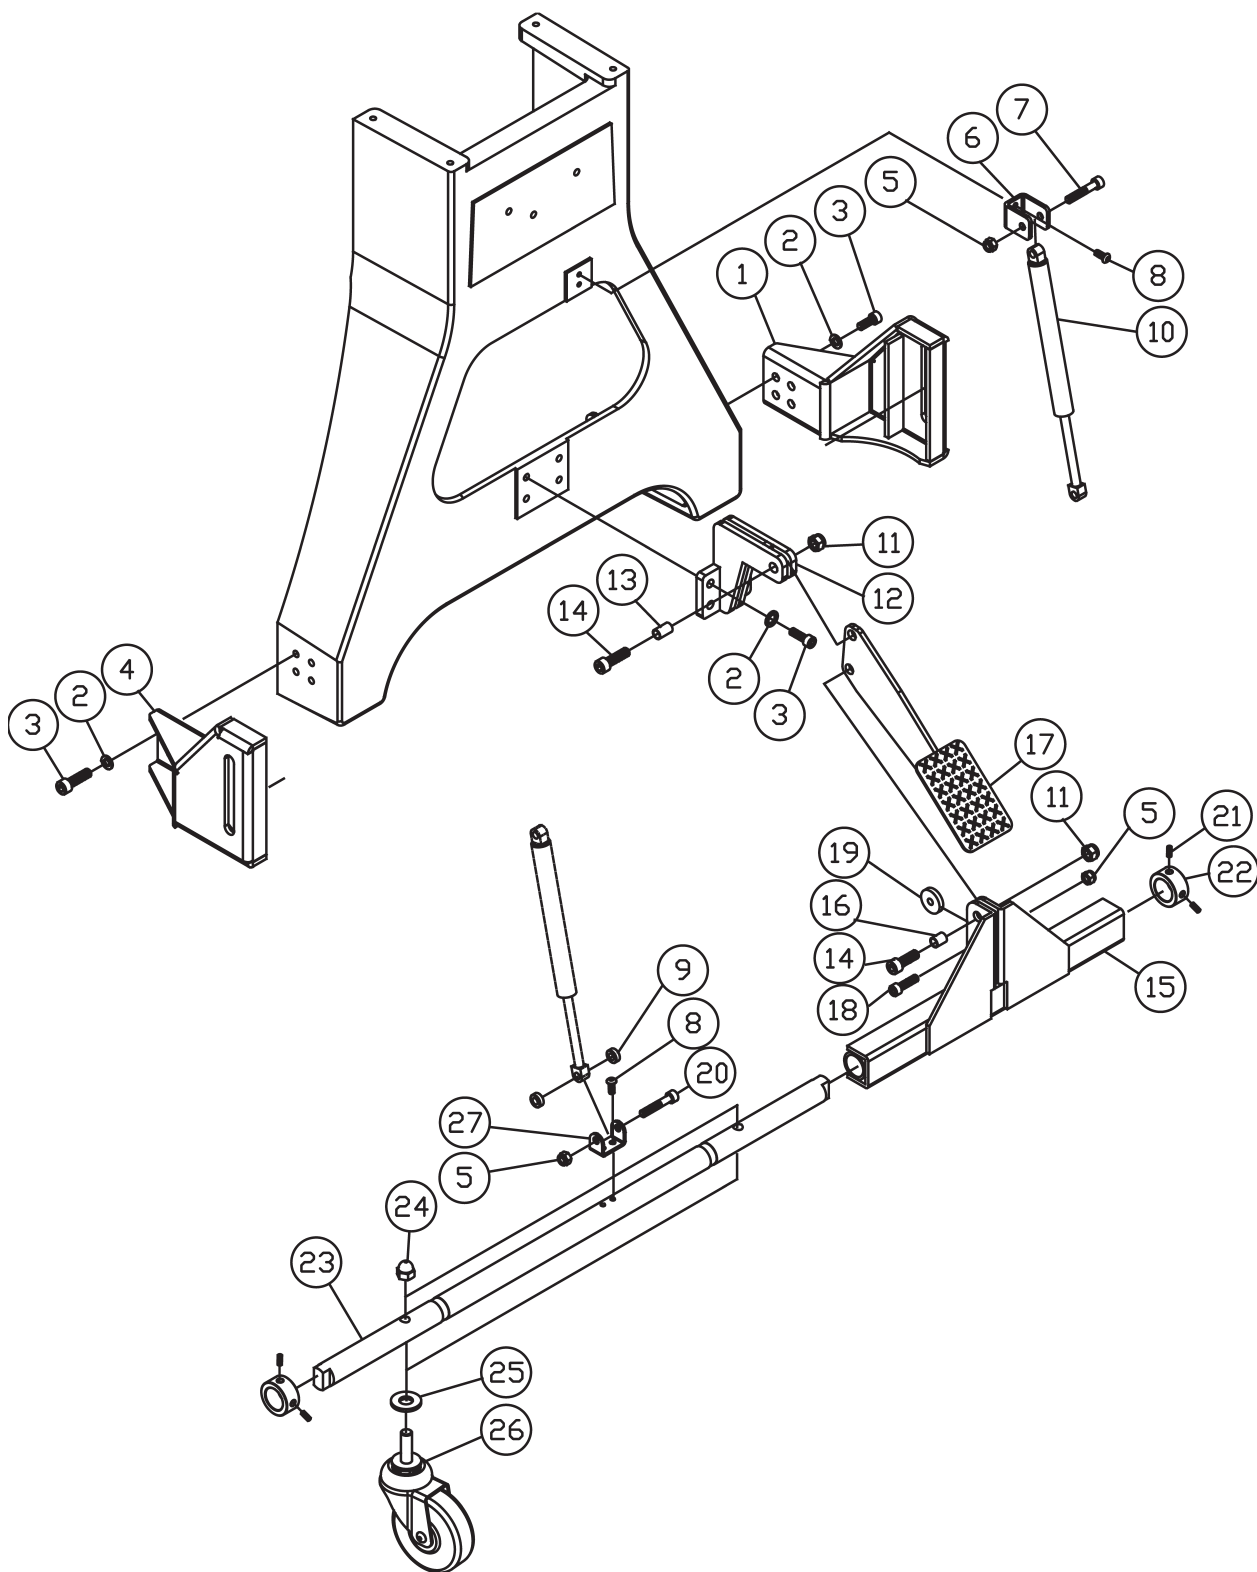

Optional Deluxe Wheel System				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-901	Support Bracket-Right		2
2	PLAREVO1836-1115	Lock Washer	3/8"	24
3	PLAREVO1836-195	Socket Head Cap Screw	3/8-16UNCx1"	24
4	PLAREVO1836-904	Support Bracket-Left		2
5	PLAREVO1836-905	Nylon Insert Lock Nut	M8x1.25	6
6	PLAREVO1836-906	Support Bracket		2
7	PLAREVO1836-907	Socket Head Cap Screw	M8x1.25x45mm	2
8	PLAREVO1836-1146	Socket Head Button Screw	1/4-20UNCx3/8"	8
9	PLAREVO1836-909	Spacer		4
10	PLAREVO1836-910	Cylinder		2
11	PLAREVO1836-911	Nylon Insert Lock Nut	M10x1.5	4
12	PLAREVO1836-912	Support Bracket		2
13	PLAREVO1836-913	Bushing		2
14	PLAREVO1836-914	Socket Head Cap Screw	M10x1.5x35mm	4
15	PLAREVO1836-915	Connecting rod		2
16	PLAREVO1836-916	Bushing		2
17	PLAREVO1836-917	Foot Brake		2
18	PLAREVO1836-918	Socket Head Cap Screw	M8x1.25x30mm	2
19	PLAREVO1836-919	Bushing		2
20	PLAREVO1836-920	Socket Head Cap Screw	M8x1.25x50mm	2
21	PLAREVO1836-199	Set Screw	M8x1.25x6	8
22	PLAREVO1836-922	Spacer		4
23	PLAREVO1836-923	Rod		2
24	PLAREVO1836-924	Nut	1/2-12UNC	4
25	PLAREVO1836-925	Flat Washer	1/2"	4
26	PLAREVO1836-926	Caster		4
27	PLAREVO1836-927	Support Bracket		2



Laguna Tools Inc.
UK DECLARATION OF CONFORMITY
'original'

Product model: 24/36 Woodturning Lathe

Name and address of the manufacturer: Laguna Tools Inc. 2072 Alton Parkway, Irvine, California 92606, USA.

Name and address of the UK Authorised Representative: Axminster Tool Centre Ltd, Unit 10 Weycroft Avenue, Axminster, Devon EX13 5PH, United Kingdom.

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Object of the declaration: 24/36 Woodturning Lathe

The object of the declaration described above is in conformity with the relevant GB legislation:

Supply of Machinery (Safety) Regulations 2008 as amended.
Electromagnetic Compatibility Regulations 2016 as amended.

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

EN ISO 12100:2010 Safety of machinery - General principles for design - Risk assessment and risk reduction.
EN 60204-1:2018 Safety of machinery - Electrical equipment of machines - Part 1: General requirements.
ISO 13849-1:2023 Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design (ISO 13849-1:2023).
EN 50370-1:2005 Electromagnetic compatibility (EMC) - Product family standard for machine tools - Part 1: Emission.
EN 50370-2:2003 Electromagnetic compatibility (EMC) - Product family standard for machine tools - Part 2: Immunity.
EN 61000-4-2:2009 Electromagnetic compatibility (EMC) -Part 4-2: Testing and measurement techniques - Electrostatic discharge immunity test.
EN 61000-4-4:2012 Electromagnetic compatibility (EMC) - Part 4-4: Testing and measurement techniques - Electrical fast transient/burst immunity test (IEC 61000-4-4:2012). IEC 61000-4-6:2023 Electromagnetic compatibility (EMC) - Part 4-6: Testing and measurement techniques - Immunity to conducted disturbances, induced by radio-frequency fields.
EN IEC 61000-6-4:2019 Electromagnetic compatibility (EMC) - Part 4-6: Testing and measurement techniques - Immunity to conducted disturbances, induced by radio-frequency fields.

Additional information:

Name and address of person authorised to compile the technical file: Axminster Tool Centre Ltd, Unit 10 Weycroft Avenue, Axminster, Devon EX13 5PH, United Kingdom

The machinery fulfils all relevant provisions of Supply of Machinery (Safety) Regulations 2008 as amended.

Signed for and behalf of: Axminster Tool Centre Ltd.

(place and date of issue): Axminster, Devon, United Kingdom, 20th June 2024

(name, function): Andrew Parkhouse, Supply Chain Director

Signature:



EC DECLARATION OF CONFORMITY

We
(Manufacturer)

Laguna Tools Inc.
2072 Alton Parkway, Irvine, California 92606, USA

Declare that the product name: Wood Lathe

Model Name : REVO 12 | 16, REVO 15 | 24, REVO 18 | 36, REVO 24 | 36

Conform with the essential safety requirements of the relevant European Directive:

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility Directive 2014/30/EU

The person who compile technical file established within the EU:

Name: IGM nastroje a stroje s.r.o.
Address: Ke Kopanine 560, Tuchomerice , CZ-252 67
Tel.: +420 220 950 910
Email: sales@igmtools.com

Mounting and connecting instructions defined in catalogues and technical construction files must be respected by the user.

They are based on the following standards :

- EN ISO 12100:2010 Safety of Machinery - General principles for design / Risk Assessment and Risk reduction.
- EN 60204-1:2006+AC:2010 Safety of machinery – Electrical equipment of machines, part 1 : General requirements.
- EN 13849-1:2015 Safety of machinery – Safety – related parts of control systems Part 1: General principles for design
- EN 50370 -1:2005 Electromagnetic compatibility (EMC) – Product family standard for machine tools – Part 1: Emission.
- EN 50370 -2:2003 Electromagnetic compatibility (EMC) – Product family standard for machine tools – Part 2: Immunity.
- EN 61000-4-2: 2009 Electrostatic (ESD)
- EN 61000-4-4: 2012 Electrical fast transient/burst requirements (EFT/Burst)
- EN 61000-4-6: 2014 Immunity to conducted disturbances, induced by radio-frequency fields (CS)

Responsible for the documentation: Head Product Management, Laguna Tools Inc.

Name : Torben Helshoj

Responsibility : President

Authorized Signature

Date : Oct. 15, 2021

Place : Laguna Tools Inc.

2072 Alton Parkway, Irvine, California 92606, USA

Telephone: +1 800 234-1976

Fax: +1 949 474-0150



Warranty

New machines and accessories sold by Laguna Tools carry a one-year warranty effective from the date of shipping.

Laguna Tools guarantees all new machines and accessories sold to be free of manufacturers' defective workmanship, parts and materials. We will repair or replace, without charge, any parts determined by Laguna Tools, Inc. to be a manufacturer's defect.

We require that the defective item/part be returned to the Laguna appointed dealer you purchased from with the complaint. Photographic / videos maybe required when any fault is reported so we can agree action needed. Any machines returned to Laguna appointed dealer must be returned with packaging in the same manner in which it was received. If a part or blade is being returned it must have adequate packaging to ensure no damage is received during shipping. In the event the item/part is determined to be damaged due to lack of maintenance, cleaning or misuse/abuse, the customer will be responsible for the cost to replace the item/part, plus all related shipping charges. This limited warranty does not apply to natural disasters, acts of terrorism, normal wear and tear, product failure due to lack of maintenance or cleaning, damage caused by accident, neglect, lack of or inadequate dust collection, misuse/abuse or damage caused where repair or alterations have been made or attempted by others. Laguna Tools, Inc. is not responsible for additional tools or modifications sold or performed (other than from/by Laguna Tools, Inc.) on any Laguna Tools, Inc. machine.

Warranty maybe voided upon the addition of such described tools and/or modifications, determined on a case-by-case basis.

Normal user alignment, adjustment, tuning, machine settings and consumables I.E; blades are not covered by this warranty. It is the responsibility of the user to understand basic machinery operation, settings and procedures and to properly maintain the equipment in accordance with the standards provided by the manufacturer.

The labour required to install replacement parts is the responsibility of the user. Laguna Tools is not responsible for damage or loss caused by a freight company or other circumstances not in our control.

All claims for loss or damaged goods must be notified to the authorised dealer within twenty-four hours, if the machine is received damaged it must be signed for damaged.

Only new machines sold to the original owner are covered by this warranty.



Distributed by

AXMINSTER TOOLS

For after sales help visit

axminstertools.com or call 03332 406406



The packaging is suitable for recycling.
Please dispose of it in a responsible manner.



EU Countries Only

Do not dispose of electric tools together with household waste material.
By law they must be collected and recycled separately.



Axminster Tools, Axminster Devon EX13 5PH